

Liste de capacités des éléments entretenus par le Centre d'Affaires Chaudronnerie

*Capability list for components maintained by the
Sheet Metal Work facility*

Destinataires :

- DQS/Q (Original papier)
- OSAC (Rouen)
- CID REVIMA

Révision	Date	Motif de la révision/Reason for revision	Pages modifiées/ Pages affected
29	19/10/2018	Changement de logo de la Société / <i>change of Company logo</i>	1
28	20/07/2018	Ajout de 16 références CFM56-5C/ <i>Addition of 16 CFM56-5C part numbers</i>	41,42,43,44,45,46, 53
27	17/05/2018	Ajout de 5 références GE90-100/ <i>Addition of 5 GE 90-100 part number</i>	54
26	21/12/2017	Ajout d'une référence GE 90/ <i>Addition of 1 GE 90 part number</i>	54
25	14/11/2017	Ajout de cinq références GE 90 / <i>Addition of 5 GE 90 part numbers</i>	54
24	30/08/2017	Retrait de 22 références CFM56, 2 références BOEING et 6 références CF6-80. Ajout d'une référence GE 90 / <i>Removal of 22 CFM56 part numbers, 2 BOEING part numbers and 6 CF6-80 part numbers. Addition of 1 GE 90 part number</i>	8, 30, 54, 59
23	08/02/2017	Ajout de références / <i>Addition of references</i>	7, 46
22	28/09/2016	Ajout de références / <i>Addition of references</i>	Toutes / <i>All</i>
21	26/05/2016	Ajout d'une référence GE/ <i>Addition of one GE reference</i>	56
20	09/05/2016	Ajout d'une référence GE/ <i>Addition of one GE reference</i>	56
19	25 avril 2016	Mise à jour, ajout de références et retrait de plusieurs séries / <i>Update, addition of references and removal of several series</i>	Toutes / <i>All</i>
18	2 fév. 2015	Mise à jour, ajout de références / <i>Updating, add references</i>	Toutes / <i>All</i>
17	17 juin 2014	Mise à jour, ajout de références / <i>Updating, add references</i>	Toutes / <i>All</i>
16	10 oct. 2013	Mise à jour, ajout de références / <i>Updating, add references</i>	Toutes / <i>All</i>
15	02 jan. 2012	Mise à jour, ajout de références / <i>Updating, add references</i>	Toutes / <i>All</i>
14	05 Jan. 2011	Mise à jour, ajout de références / <i>Updating, add references</i>	Toutes / <i>All</i>
13	30 dec.2009	Mise à jour, ajout de références / <i>Updating, add references</i>	Toutes / <i>All</i>
12	28 oct. 2008	Mise à jour logo, ajout de références / <i>Updating for logo, add references</i>	Toutes / <i>All</i>
11	10 jan. 2008	Mise à jour, ajout de références / <i>Updating, add references</i>	Toutes / <i>All</i>

Emis par : Sandra WHEELTON
Issued by

Revu par : Thomas HOSPITAL
Reviewed by

Approuvé par : Thierry CINQUEUX
Approved by

Fonction :
Postion
AQ

Visa

Fonction :
Postion
AQ

Visa

Fonction :
Postion
AQ

Visa

Révision : 29

Page : 1

SUMMARY

1- Purpose	4
2- Area of applications and responsibilities.....	4
2.1- Area of applications	4
2.2- Responsibilities	4
3- Definitions and references	4
3.1- Definitions.....	4
3.2- References	4
4- Outlines	6
4.1- List of Engine Components (chap. 70 à 80).....	
4.1.1- BOEING Series	7
4.1.2- CF6-80 Series.....	9
4.1.3- CF6-50 Series.....	32
4.1.4- CFM56 Series.....	43
4.1.5- GE 90 Series.....	60
4.1.6- PW2037 Series	62
4.1.7- PW4000 Series	63
4.1.8- ATR 42/72.....	65
4.1.9- TRENT	66
4.2- List of Pneumatic Components (chap.36).....	
4.2.1- BOEING Series.....	67
4.3- List of Structural Parts (chap 54).....	
4.3.1-AIRBUS Series	69

SOMMAIRE

1- Objet.....	5
2- Domaine d'application et responsabilités	5
2.1- Domaine d'application.....	5
2.2- Responsabilités.....	5
3- Définitions et références.....	5
3.1- Définitions.....	5
3.2- Références	5
4- Descriptif.....	6
4.1- Liste des éléments moteurs (chap.70 à 80)	
4.1.1- Séries BOEING	7
4.1.2- Séries CF6-80.....	9
4.1.3- Séries CF6-50.....	32
4.1.4- Séries CFM56.....	43
4.1.5 - Séries GE 90	60
4.1.6- Séries PW2037	62
4.1.7- Séries PW4000.....	63
4.1.8- ATR 42/72.....	65
4.1.9- TRENT	66
4.2- Liste des éléments Air Comprimé (chap. 36)	
4.2.1- Séries BOEING.....	67
4.3 - Liste des pièces de Structure (chap 54).....	
4.3.1- Séries AIRBUS	69

1- Purpose

This instruction lists the components maintained by the Sheet Metal Work within the scope of the approvals held by REVIMA Company.

2- Aera of application and Responsibilities

2.1- Area of application

This instruction applies to the Sheet Metal Work Sales and Support personnel and to Certifying Staff.

2.2- Responsibilities

The Certifying Staff of the Sheet Metal Work Unit has to verify that the part number of the component is present on the capability list before release to service.

*The Quality Department is responsible for issuing and updating this instruction according to the procedure **PRO-DQL-03-01** entitled **MANAGEMENT AND UPDATING OF THE CAPABILITY LIST**.*

3- Definitions and References

3.1- Definitions

This capability list of engine components maintained by the Sheet Metal Work Unit is unique. Nevertheless, differences between EASA and FAR 145 approvals held by the Company require to specify, component by component, which approval(s) is (are) concerned.

This information is specified in the corresponding lists.

3.2- References

*PRO-DQL-03-01 entitled **MANAGEMENT AND UPDATING OF CAPABILITY LISTS***

1- Objet

Cette consigne a pour but de lister les éléments entretenus par l'Unité Chaudronnerie dans le cadre des agréments détenus par la Société REVIMA.

2- Domaine d'application et Responsabilités

2.1- Domaine d'application

La présente consigne s'applique au personnel Support et Ventes et aux APRS de l'Unité Chaudronnerie.

2.2- Responsabilités

Les APRS de l'Unité Chaudronnerie doivent consulter cette liste avant d'approuver la remise en service d'un élément révisé par l'atelier.

Le Département Qualité est responsable de l'établissement et de la mise à jour de cette consigne selon la procédure **PRO-DQL-03-01** intitulée **GESTION ET MISE À JOUR DES LISTES DE CAPACITÉS**.

3- Définitions et références

3.1- Définitions

Cette liste de capacités des éléments moteurs entretenus par l'Unité Chaudronnerie est unique. Néanmoins, des différences entre les agréments EASA et FAR 145 détenus par la Société, nécessitent de préciser pour chaque matériel quel(s) agrément(s) est (sont) concerné(s).

Ces précisions sont données dans les listes correspondantes.

3.2- Références

PRO-DQL-03-01 intitulée **GESTION ET MISE À JOUR DES LISTES DE CAPACITÉS**

4- Descriptif / Outlines

4.1- Liste des éléments moteurs / List of engine components (chap. 70/80)

Niveau d'entretien/*Capability level* = REPAIR / INSPECTION-TEST / OVERHAUL
Domaine d'agrément EASA / *EASA rating* = C7
Domaine d'agrément FAA / *FAA rating* = Limited Engine

4.2- Liste des éléments Air Comprimé / List of Pneumatic Components (chap.36)

Niveau d'entretien / *Capability level* = REPAIR / INSPECTION-TEST
Domaine d'agrément EASA / *EASA rating* = C17
Domaine d'agrément FAA / *FAA rating* = Limited Accessories

4.3- Liste des pièces de Structure / List of Structural Parts (chap. 54)

Niveau d'entretien / *Capability level* = REPAIR / INSPECTION-TEST
Domaine d'agrément EASA / *EASA rating* = C20
Domaine d'agrément FAA / *FAA rating* = Limited Airframe

4.1.1- Boeing

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
015T0805-6	Nozzle Assy Primary	BOEING	78-11-14	X	X		
015T0805-8	Nozzle Assy Primary	BOEING	78-11-14	X	X		
015T0805-9	Nozzle Assy Primary	BOEING	78-11-14	X	X		
015T0805-10	Nozzle Assy Primary	BOEING	78-11-14	X	X		
015U1547-11	Nozzle Assy Primary	BOEING	78-11-14	X	X		
015U1547-43	Nozzle Assy Primary	BOEING	78-11-14	X	X		
015U1547-271	Nozzle Assy Primary	BOEING	78-11-14	X	X		
015U1547-432	Nozzle Assy Primary	BOEING	78-11-14	X	X		
14818-1	Hose assy	BOEING	73-11-02	X	X		
210-0003-9	Tube aft pylon drain	BOEING	73-11-02	X	X		
314T3310-7/-9/-10/-11	Primary Exhaust Sleeve Assy	BOEING	78-11-06	X	X	X	
314U2100-27	Nozzle Assy Primary	BOEING	78-11-14	X	X		
314U2100-31	Nozzle Assy Primary	BOEING	78-11-14	X	X		
314U2100-43	Nozzle Assy Primary	BOEING	78-11-14	X	X		
314U2100-46	Nozzle Assy Primary	BOEING	78-11-14	X	X		
314U2100-47	Nozzle Assy Primary	BOEING	78-11-14	X	X		
314U2100-53	Nozzle Assy Primary	BOEING	78-11-14	X	X		
314U2100-57	Nozzle Assy Primary	BOEING	78-11-14	X	X		
314U2100-70	Nozzle Assy Primary	BOEING	78-11-14	X	X		
314U2100-71	Nozzle Assy Primary	BOEING	78-11-14	X	X		
314U2100-72	Nozzle Assy Primary	BOEING	78-11-14	X	X		
314U2100-82	Nozzle Assy Primary	BOEING	78-11-14	X	X		
332U2314-1	Duct Instl-Eng start	BOEING	73-11-02	X	X		
60B00254-25	Hose assy	BOEING	73-11-02	X	X		
60B00254-26	Hose assy	BOEING	73-11-02	X	X		
60B00254-27	Hose assy	BOEING	73-11-02	X	X		
60B00254-31	Hose assy	BOEING	73-11-02	X	X		
60B90106-13	Hose assy eng feed fuel	BOEING	73-11-02	X	X		
60B90106-23	Hose assy eng feed fuel	BOEING	73-11-02	X	X		
60B90121-6	Hose assy	BOEING	73-11-02	X	X		
65B90168-12	Starter duct assy	BOEING	73-11-02	X	X		
65B90168-4	Starter duct assy	BOEING	73-11-02	X	X		
65B90168-8	Starter duct assy	BOEING	73-11-02	X	X		
65B90257-3	Fan thrust reverser air supply duct assy	BOEING	73-11-02	X	X		
65B90262-1	Fan reverser air supply duct assy	BOEING	73-11-02	X	X		
65B91199-1	Engine 15 th stage bleed port 2 duct assy	BOEING	73-11-02	X	X		
65B91199-6	Engine 15 th stage bleed port 2 duct assy	BOEING	73-11-02	X	X		

4.1.1- Boeing

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
65B91247-1	Fan reverser air supply duct assy	BOEING	73-11-02	X	X		
65B92831-1	Engine 15 th stage bleed port 2 duct assy	BOEING	73-11-02	X	X		
65B92831-3	Engine 15 th stage bleed port 2 duct assy	BOEING	73-11-02	X	X		
65B93011-10	Surge bleed exhaust duct assy	BOEING	73-11-02	X	X		
65B93011-14	Surge bleed exhaust duct assy	BOEING	73-11-02	X	X		
65B93050-1	Fan reverser air supply duct assy	BOEING	73-11-02	X	X		
65B93051-1	Fan reverser air supply duct assy	BOEING	73-11-02	X	X		
65B93051-5	Fan reverser air supply duct assy	BOEING	73-11-02	X	X		
65B94604-27	Nacelle starter and TAI duct assy	BOEING	73-11-02	X	X		
65B94604-4	Nacelle starter and TAI duct assy	BOEING	73-11-02	X	X		
65B94604-5	Duct assy	BOEING	73-11-02	X	X		
65B94613-21	Tube assy welded	BOEING	73-11-02	X	X		
65B94692-6	Tube aft pylon drain	BOEING	73-11-02	X	X		
65B94692-8	Tube assy drain	BOEING	73-11-02	X	X		
65B94692-9	Tube assy drain	BOEING	73-11-02	X	X		
65B94814-16	Duct assy	BOEING	73-11-02	X	X		
65B94814-17	Duct assy	BOEING	73-11-02	X	X		
65B94814-3	Duct assy	BOEING	73-11-02	X	X		

4.1.2- CF6-80 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
015U0428-7	Duct assy-Low start	G.E.	72-09-03	X	X		
108292-9	Hose Oil	G.E.	72-09-03	X	X		
109604	Tube and hose vent oil	G.E.	72-09-03	X	X		
109642	Hose fuel	G.E.	72-09-03	X	X		
109643	Tube-VSV Hose	G.E.	72-09-03	X	X		
109655	Hose fuel	G.E.	72-09-03	X	X		
109657	Tube and hose VBV	G.E.	72-09-03	X	X		
109658	Tube and hose VBV	G.E.	72-09-03	X	X		
109661	Tube and hose cit sensor P6 fuel	G.E.	72-09-03	X	X		
109900-5	Hose fuel	G.E.	72-09-03	X	X		
109900-7	Hose fuel	G.E.	72-09-03	X	X		
109900-8	Hose fuel	G.E.	72-09-03	X	X		
109900-9	Hose fuel	G.E.	72-09-03	X	X		
109900-12	Hose fuel	G.E.	72-09-03	X	X		
110002	Hose fuel	G.E.	72-09-03	X	X		
110396	Hose fuel	G.E.	72-09-03	X	X		
110640	Tube Fuel Servo Heater	G.E.	72-09-03	X	X		
112421-16	Tube and hose, oil	G.E.	72-09-03	X	X		
112685	Tube and hose fuel VBV	G.E.	72-09-03	X	X		
113255	Tube and hose fuel VBV	G.E.	72-09-03	X	X		
113255-1	Tube and hose fuel VBV	G.E.	72-09-03	X	X		
113627	Hose Oil	G.E.	72-09-03	X	X		
113635L0584-180	Hose Oil	G.E.	72-09-03	X	X		
113691	Hose oil	G.E.	72-09-03	X	X		
113756-501	Tube Fuel	G.E.	72-09-03	X	X		
113764	Tube and hose air signal IDG cooling valve	G.E.	72-09-03	X	X		
113766	Tube and hose oil CLG RTN	G.E.	72-09-03	X	X		
114307	Tube and hose fuel	G.E.	72-09-03	X	X		
114308	Pipe fuel	G.E.	72-09-03	X	X		
114309	Tube Fuel Hose	G.E.	72-09-03	X	X		
114423	Tube	G.E.	72-09-03	X	X		
114458	Tube and hose oil CLG supply	G.E.	72-09-03	X	X		
114459-1	Tube and Hose oil systeme	G.E.	72-09-03	X	X		
114741H0084S	Hose teflon oil	G.E.	72-09-03	X	X		
114856	Tube and hose vent oil	G.E.	72-09-03	X	X		
114885	Hose Fuel	G.E.	72-09-03	X	X		
115207	Tube oil scavenge system	G.E.	72-09-03	X	X		

4.1.2- CF6-80 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
115758	Tube and Hose Fuel	G.E.	72-09-603	X	X		
115759-4	Tube and Hose VBV	G.E.	72-09-03	X	X		
1289M10G01	Can drain fuel	G.E.	72-09-03	X	X		
1289M38G01	Tube fuel VSV	G.E.	72-09-03	X	X		
1289M67P09	Tube and hose fuel H / M N1	G.E.	72-09-03	X	X		
1289M67P10	Tube and hose fuel H / M N1	G.E.	72-09-03	X	X		
1289M67P11	Tube and hose fuel H / M N1	G.E.	72-09-03	X	X		
1289M67P12	Tube and hose fuel H / M N1	G.E.	72-09-03	X	X		
1289M76G01	Tube H/M n°1 sensor fuel drain	G.E.	72-09-03	X	X		
1290M21G01	Duct air LPR aft	G.E.	72-09-03	X	X		
1290M22G01	Tube LPR FWD air	G.E.	72-09-03	X	X		
1290M22G04	Tube LPR FWD air	G.E.	72-09-03	X	X		
1290M23G01	Tube LP recoup FWD air	G.E.	72-09-03	X	X		
1290M23G06	Tube LP recoup FWD air	G.E.	72-09-03	X	X		
1290M24G01	Tube LPR FWD air	G.E.	72-09-03	X	X		
1290M24G08	Tube LPR FWD air	G.E.	72-09-03	X	X		
1290M26P01	Tube and hose variable bleed valve	G.E.	72-09-03	X	X		
1290M26P02	Tube and hose variable bleed valve	G.E.	72-09-03	X	X		
1290M26P03	Tube and hose variable bleed valve	G.E.	72-09-03	X	X		
1290M26P04	Tube and hose variable bleed valve	G.E.	72-09-03	X	X		
1290M27P01	Tube and hose VBV actuator fuel	G.E.	72-09-03	X	X		
1290M27P02	Tube and hose VBV actuator fuel	G.E.	72-09-03	X	X		
1290M27P03	Tube and hose VBV actuator fuel	G.E.	72-09-03	X	X		
1290M27P04	Tube and hose VBV actuator fuel	G.E.	72-09-03	X	X		
1290M39G07	Tube air HP recoup	G.E.	72-09-03	X	X		
1290M39G08	Tube air HP recoup	G.E.	72-09-03	X	X		
1290M39G09	Tube air HP recoup	G.E.	72-09-03	X	X		
1290M47P01	Tube hose VS	G.E.	72-09-03	X	X		
1290M47P02	Tube hose VS	G.E.	72-09-03	X	X		
1290M47P03	Tube hose VS	G.E.	72-09-03	X	X		
1290M47P04	Tube hose VS	G.E.	72-09-03	X	X		
1290M48P01	Tube VSV hose	G.E.	72-09-03	X	X		
1290M48P02	Tube VSV hose	G.E.	72-09-03	X	X		
1290M48P03	Tube VSV hose	G.E.	72-09-03	X	X		
1290M48P04	Tube VSV hose	G.E.	72-09-03	X	X		
1290M88G01	Duct air	G.E.	72-09-03	X	X		
1291M48G01	Duct Assy Inlet LP	G.E.	78-11-01	X	X		

4.1.2- CF6-80 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
1292M13G05	Mount platform	G.E.	71-21-01	X	X		
1292M13G06	Mount platform	G.E.	71-21-01	X	X		
1293M35G01	Duct air	G.E.	72-09-03	X	X		
1293M36G01	Duct air	G.E.	72-09-03	X	X		
1293M36G02	Duct air	G.E.	72-09-03	X	X		
1293M36G06	Duct air	G.E.	72-09-03	X	X		
1293M41P01	Tube and hose CIT sensor	G.E.	72-09-03	X	X		
1293M41P02	Tube and hose CIT sensor	G.E.	72-09-03	X	X		
1293M41P03	Tube and hose CIT sensor	G.E.	72-09-03	X	X		
1293M41P04	Tube and hose CIT sensor	G.E.	72-09-03	X	X		
1293M79P01	Hose assembly	G.E.	72-09-03	X	X		
1293M79P02	Hose assembly	G.E.	72-09-03	X	X		
1293M79P03	Hose assembly	G.E.	72-09-03	X	X		
1293M79P04	Hose assembly	G.E.	72-09-03	X	X		
1294M22G06	Tube air B sump	G.E.	72-09-03	X	X		
1294M22G07	Tube air B sump	G.E.	72-09-03	X	X		
1294M90G01	Tube oil sump scav. aft	G.E.	72-09-03	X	X		
1297M14G01	Tube air HPT supply RS lower	G.E.	72-09-03	X	X		
1297M14G04	Tube air HPT supply RS lower	G.E.	72-09-03	X	X		
1297M14G06	Tube air HPT supply RS lower	G.E.	72-09-03	X	X		
1297M14G07	Tube air HPT supply RS lower	G.E.	72-09-03	X	X		
1297M14G08	Tube air HPT supply RS lower	G.E.	72-09-03	X	X		
1297M14G09	Tube air HPT supply RS lower	G.E.	72-09-03	X	X		
1297M14G10	Tube air HPT supply RS lower	G.E.	72-09-03	X	X		
1297M14G11	Tube air HPT supply RS lower	G.E.	72-09-03	X	X		
1297M14G12	Tube air HPT supply RS lower	G.E.	72-09-03	X	X		
1297M14G13	Tube air HPT supply RS lower	G.E.	72-09-03	X	X		
1297M65G01	Manifold air	G.E.	72-09-03	X	X		
1297M79G02	Tube air HPT / LPT acc cooling	G.E.	72-09-03	X	X		
1297M79G03	Tube air HPT / LPT acc cooling	G.E.	72-09-03	X	X		
1297M79G06	Tube air HPT / LPT acc cooling	G.E.	72-09-03	X	X		
13000206-0094S	Hose assy HPT / LPTCC return	G.E.	72-09-03	X	X		
1301M13G03	Bracket	G.E.	72-32-10	X	X		
1301M28G06	Engine Mount Platform	G.E.	72-21-01	X	X		
1301M28G07	Engine Mount Platform	G.E.	72-21-01	X	X		
1301M28G08	Engine Mount Platform	G.E.	72-21-01	X	X		
1302M11G01	Tube air	G.E.	72-09-03	X	X		

4.1.2- CF6-80 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
1303M31G06	Manifold fuel L/S	G.E.	72-09-03	X	X		
1303M31G07	Manifold fuel L/S	G.E.	72-09-03	X	X		
1303M31G08	Manifold fuel L/S	G.E.	72-09-03	X	X		
1303M31G10	Manifold fuel L/S	G.E.	72-09-03	X	X		
1303M31G12	Manifold fuel L/S	G.E.	72-09-03	X	X		
1303M32G06	Manifold fuel right side	G.E.	72-09-03	X	X		
1303M32G07	Manifold fuel right side	G.E.	72-09-03	X	X		
1303M32G08	Manifold fuel right side	G.E.	72-09-03	X	X		
1303M32G10	Manifold fuel right side	G.E.	72-09-03	X	X		
1303M32G12	Manifold fuel right side	G.E.	72-09-03	X	X		
1303M33G04	Tube fuel drain	G.E.	72-09-03	X	X		
1303M33G05	Tube fuel drain	G.E.	72-09-03	X	X		
1303M33G06	Tube fuel drain	G.E.	72-09-03	X	X		
1307M10G01	Tube CDP	G.E.	72-09-03	X	X		
1307M10G02	Tube CDP	G.E.	72-09-03	X	X		
1307M10G03	Tube CDP	G.E.	72-09-03	X	X		
1309M64P01	Tube	G.E.	72-09-03	X	X		
1309M64P02	Tube	G.E.	72-09-03	X	X		
1309M64P03	Tube	G.E.	72-09-03	X	X		
1309M64P05	Tube	G.E.	72-09-03	X	X		
1309M64P07	Tube	G.E.	72-09-03	X	X		
1309M78G01	Duct air	G.E.	72-09-03	X	X		
1309M78G06	Duct air	G.E.	72-09-03	X	X		
1309M78G07	Duct air	G.E.	72-09-03	X	X		
1309M78G08	Duct air	G.E.	72-09-03	X	X		
1309M78G12	Duct air	G.E.	72-09-03	X	X		
1309M78G14	Duct air	G.E.	72-09-03	X	X		
1309M96P01	Hose fuel	G.E.	72-09-03	X	X		
1309M96P04	Hose fuel	G.E.	72-09-03	X	X		
1309M96P05	Hose fuel	G.E.	72-09-03	X	X		
1309M96P06	Hose fuel	G.E.	72-09-03	X	X		
1309M96P07	Hose fuel	G.E.	72-09-03	X	X		
1309M96P08	Hose fuel	G.E.	72-09-03	X	X		
1309M96P09	Hose fuel	G.E.	72-09-03	X	X		
1309M96P12	Hose fuel	G.E.	72-09-03	X	X		
1310M21G05	Tube air accessory gearbox left side	G.E.	72-09-03	X	X		
1310M58P01	Tube and hose	G.E.	72-09-03	X	X		

4.1.2- CF6-80 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
1310M58P02	Tube and hose	G.E.	72-09-03	X	X		
1310M58P03	Tube and hose	G.E.	72-09-03	X	X		
1310M58P04	Tube and hose	G.E.	72-09-03	X	X		
1310M76G01	Tube air LPT / HPT acc cooling	G.E.	72-09-03	X	X		
1310M76G03	Tube air LPT / HPT acc cooling	G.E.	72-09-03	X	X		
1310M76G05	Tube air LPT / HPT acc cooling	G.E.	72-09-03	X	X		
1310M76G07	Tube air LPT / HPT acc cooling	G.E.	72-09-03	X	X		
1310M90G01	Tube air B sump vent	G.E.	72-09-03	X	X		
1313M37G07	Accessory shield assembly	G.E.	72-09-03	X	X		
1313M37G11	Accessory shield assembly	G.E.	72-09-03	X	X		
1313M43G15	Accessory shield assembly	G.E.	72-09-03	X	X		
1313M43G19	Accessory shield assembly	G.E.	72-09-03	X	X		
1313M47G03	Nozzle assy primary	GE	78-11-01	X	X		
1313M47G06	Nozzle assy primary	GE	78-11-01	X	X		
1313M94G08	Accessory shield assembly	G.E.	72-09-03	X	X		
1313M94G09	Accessory shield assembly	G.E.	72-09-03	X	X		
1314M35G03	Accessory shield assembly	G.E.	72-09-03	X	X		
1315M35G01	Tube air HPT supply	G.E.	72-09-03	X	X		
1315M35G02	Tube air HPT supply	G.E.	72-09-03	X	X		
1315M35G03	Tube air HPT supply	G.E.	72-09-03	X	X		
1315M56G03	Tube air HPT cooling supply RS lower	G.E.	72-09-03	X	X		
1315M56G05	Tube air HPT cooling supply RS lower	G.E.	72-09-03	X	X		
1315M56G06	Tube air HPT cooling supply RS lower	G.E.	72-09-03	X	X		
1315M56G07	Tube air HPT cooling supply RS lower	G.E.	72-09-03	X	X		
1315M78G05	Tube	G.E.	72-09-03	X	X		
1315M78G09	Tube	G.E.	72-09-03	X	X		
1315M78G11	Tube	G.E.	72-09-03	X	X		
1315M78G13	Duct assy	G.E.	72-09-03	X	X		
1321M23G01	Tube B scavenge mid oil	G.E.	72-09-03	X	X		
1321M93G01	Tube hydraulic drain lower oil	G.E.	72-09-03	X	X		
1321M97G01	Tube air HPT cooling supply RS	G.E.	72-09-03	X	X		
1321M97G03	Tube air HPT cooling supply RS	G.E.	72-09-03	X	X		
1321M97G04	Tube air HPT cooling supply RS	G.E.	72-09-03	X	X		
1322M33G09	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1322M33G10	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1322M47G05	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1322M47G06	Manifold HPT active	G.E.	72-09-03	X	X		

4.1.2- CF6-80 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
1322M47G07	Manifold HPT active	G.E.	72-09-03	X	X		
1322M47G08	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1322M63G01	Drain MFC seal	G.E.	72-09-03	X	X		
1325M18G03	Tube air LPT supply	G.E.	72-09-03	X	X		
1325M18G04	Tube air LPT supply	G.E.	72-09-03	X	X		
1326M82P01	Oil tube and hose IDG cooling	G.E.	72-09-03	X	X		
1326M82P02	Oil tube and hose IDG cooling	G.E.	72-09-03	X	X		
1326M82P03	Oil tube and hose IDG cooling	G.E.	72-09-03	X	X		
1326M90P01	Tube fuel hose	G.E.	72-09-03	X	X		
1326M90P02	Tube fuel hose	G.E.	72-09-03	X	X		
1326M90P03	Tube fuel hose	G.E.	72-09-03	X	X		
1326M90P04	Tube fuel hose	G.E.	72-09-03	X	X		
1332M30G01	Tube air	G.E.	72-09-03	X	X		
1332M30G02	Tube air	G.E.	72-09-03	X	X		
1332M50P01	Tube oil scavenge system	G.E.	72-09-03	X	X		
1332M50P02	Tube oil scavenge system	G.E.	72-09-03	X	X		
1332M50P03	Tube oil scavenge system	G.E.	72-09-03	X	X		
1332M50P04	Tube oil scavenge system	G.E.	72-09-03	X	X		
1332M50P09	Tube oil scavenge system	G.E.	72-09-03	X	X		
1332M50P10	Tube oil scavenge system	G.E.	72-09-03	X	X		
1332M52P01	Hose	G.E.	72-09-03	X	X		
1332M52P02	Hose	G.E.	72-09-03	X	X		
1332M52P03	Hose	G.E.	72-09-03	X	X		
1332M52P04	Hose	G.E.	72-09-03	X	X		
1332M63G01	Tube	G.E.	72-09-03	X	X		
1334M28P05	Tube fuel	G.E.	72-09-03	X	X		
1334M28P06	Tube fuel	G.E.	72-09-03	X	X		
1334M28P07	Tube fuel	G.E.	72-09-03	X	X		
1334M28P08	Tube fuel	G.E.	72-09-03	X	X		
1334M39G01	Tube air PS3 core aft	G.E.	72-09-03	X	X		
1334M76G03	Tube air LPT supply	G.E.	72-09-03	X	X		
1334M76G05	Tube air LPT supply	G.E.	72-09-03	X	X		
1334M95G01	Tube air	G.E.	72-09-03	X	X		
1334M95G02	Tube air	G.E.	72-09-03	X	X		
1335M10G01	Tube air	G.E.	72-09-03	X	X		
1335M38G01	LPT cooling air manifold (gauche)	G.E.	72-09-03	X	X		
1335M39G01	LPT cooling air manifold (droite)	G.E.	72-09-03	X	X		

4.1.2- CF6-80 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
1335M66G02	T/R valve air tube	G.E.	72-09-03	X	X		
1335M66G03	T/R valve air tube	G.E.	72-09-03	X	X		
1335M66G04	T/R valve air tube	G.E.	72-09-03	X	X		
1337M13G01	Tube HP REL	G.E.	72-09-03	X	X		
1337M13G02	Tube HP REL	G.E.	72-09-03	X	X		
1337M13G03	Tube HP REL	G.E.	72-09-03	X	X		
1337M72G02	Manifold air active clearance	G.E.	72-09-03	X	X		
1337M72G04	Manifold air active clearance	G.E.	72-09-03	X	X		
1337M79G02	Tube air HPT / LPT acc cooling	G.E.	72-09-03	X	X		
1337M92G01	Tube air	G.E.	72-09-03	X	X		
1338M30G02	Manifold cooling LPT lower	G.E.	72-09-03	X	X		
1339M29G01	Tube air core cowl	G.E.	72-09-03	X	X		
1339M29G02	Tube air core cowl	G.E.	72-09-03	X	X		
1339M29G04	Tube air core cowl	G.E.	72-09-03	X	X		
1339M29G06	Tube air core cowl	G.E.	72-09-03	X	X		
1339M29G07	Tube air core cowl	G.E.	72-09-03	X	X		
1339M29G09	Tube air core cowl	G.E.	72-09-03	X	X		
1339M29G10	Tube air core cowl	G.E.	72-09-03	X	X		
1339M39G01	Tube air core cowl	G.E.	72-09-03	X	X		
1339M44G01	Tube under cowl cooling	G.E.	72-09-03	X	X		
1339M81G03	Manifold air active clearance	G.E.	72-09-03	X	X		
1346M17G01	Manifold air	G.E.	72-09-03	X	X		
1346M17G02	Manifold air	G.E.	72-09-03	X	X		
1346M17G03	Manifold air	G.E.	72-09-03	X	X		
1346M81G01	Manifold air cooling	G.E.	72-09-03	X	X		
1346M81G02	Manifold air cooling	G.E.	72-09-03	X	X		
1346M81G03	Manifold air cooling	G.E.	72-09-03	X	X		
1346M81G05	Manifold air cooling	G.E.	72-09-03	X	X		
1346M81G06	Manifold air cooling	G.E.	72-09-03	X	X		
1347M81G01	Manifold air LPT cooling LS	G.E.	72-09-03	X	X		
1347M82G01	Manifold air LPT cooling RS	G.E.	72-09-03	X	X		
1349M10P01	Tube fuel hose	G.E.	72-09-03	X	X		
1349M10P02	Tube fuel hose	G.E.	72-09-03	X	X		
1349M10P03	Tube fuel hose	G.E.	72-09-03	X	X		
1349M10P04	Tube fuel hose	G.E.	72-09-03	X	X		
1349M85G01	Tube air PS3 core aft	G.E.	72-09-03	X	X		
1349M85G02	Tube air PS3 core aft	G.E.	72-09-03	X	X		

4.1.2- CF6-80 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
1349M93G01	Tube oil J box upper drain	G.E.	72-09-03	X	X		
1374M51G01	Manifold air	G.E.	72-09-03	X	X		
1374M51G02	Manifold air	G.E.	72-09-03	X	X		
1375M73G01	Duct Threaded Mid Fan Shaft	G.E.	72-24-02	X	X		
1378M49G01	Accessory shield assembly	G.E.	72.66.01	X	X		
1378M49G02	Accessory shield assembly	G.E.	72.66.01	X	X		
1378M49G03	Accessory shield assembly	G.E.	72.66.01	X	X		
1378M49G04	Accessory shield assembly	G.E.	72.66.01	X	X		
1378M49G05	Accessory shield assembly	G.E.	72.66.01	X	X		
1378M49G06	Accessory shield assembly	G.E.	72.66.01	X	X		
1378M49G10	Accessory shield assembly	G.E.	72-66-01	X	X		
1378M95G03	Accessory shield assembly	G.E.	72.66.01	X	X		
1378M95G05	Accessory shield assembly	G.E.	72.66.01	X	X		
1380M48G05	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1380M48G06	Manifold HPT active	G.E.	72-09-03	X	X		
1380M48G07	Manifold HPT active	G.E.	72-09-03	X	X		
1380M48G08	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1380M56G10	Manifold air LPT cooling	G.E.	72-09-03	X	X		
1380M56G14	Manifold - cooling LPT	G.E.	72-09-03	X	X		
1380M56G15	Manifold air LPT cooling	G.E.	72-09-03	X	X		
1380M56G19	Manifold - cooling LPT	G.E.	72-09-03	X	X		
1380M99G02	Bracket	G.E.	72-09-03	X	X		
1442M15G05	Tube air LPT cooling	G.E.	72-09-03	X	X		
1442M15G08	Tube air LPT cooling	G.E.	72-09-03	X	X		
1442M54G03	Tube oil	G.E.	72-09-03	X	X		
1442M56G02	Tube oil scavenge	G.E.	72-09-03	X	X		
1442M58G02	Tube B scavenge mid oil	G.E.	72-09-03	X	X		
1442M58G03	Tube B scavenge mid oil	G.E.	72-09-03	X	X		
1442M63G05	Tube 11 th stage air R/S lower	G.E.	72-09-03	X	X		
1442M63G07	Tube 11 th stage air R/S lower	G.E.	72-09-03	X	X		
1442M80G02	Tube Lube	G.E.	72-09-03	X	X		
1442M80G03	Tube Lube	G.E.	72-09-03	X	X		
1442M81G05	Tube air	G.E.	72-09-03	X	X		
1442M81G06	Tube air	G.E.	72-09-03	X	X		
1446M15P01	Tube fuel servo heater	G.E.	72-09-03	X	X		
1446M15P03	Tube fuel servo heater	G.E.	72-09-03	X	X		
1446M15P04	Tube fuel servo heater	G.E.	72-09-03	X	X		

4.1.2- CF6-80 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
1446M19G03	Tube air LPT supply	G.E.	72-09-03	X	X		
1446M19G05	Tube air LPT supply	G.E.	72-09-03	X	X		
1446M19G06	Tube air LPT supply	G.E.	72-09-03	X	X		
1446M19G07	Tube air LPT supply	G.E.	72-09-03	X	X		
1447M43G05	Tube air HP recoup supply	G.E.	72-09-03	X	X		
1447M43G06	Tube-RS HP recoup air supply	G.E.	72-09-03	X	X		
1447M45G08	Tube air LPT supply	G.E.	72-09-03	X	X		
1453M81P01	Hose	G.E.	72-09-03	X	X		
1453M81P02	Hose	G.E.	72-09-03	X	X		
1453M81P03	Hose	G.E.	72-09-03	X	X		
1453M81P04	Hose	G.E.	72-09-03	X	X		
1453M81P07	Hose	G.E.	72-09-03	X	X		
1453M86G01	Tee-air HP recoup	G.E.	72-09-03	X	X		
1453M86G02	Tee-air HP recoup	G.E.	72-09-03	X	X		
1453M87G01	Elbow, air HP	G.E.	72-09-03	X	X		
1453M87G02	Elbow, air HP	G.E.	72-09-03	X	X		
1453M90P05	Tube fuel	G.E.	72-09-03	X	X		
1453M90P06	Tube fuel	G.E.	72-09-03	X	X		
1453M90P07	Tube fuel	G.E.	72-09-03	X	X		
1453M90P08	Tube fuel	G.E.	72-09-03	X	X		
1455M76G01	Tube oil - fuel	G.E.	72-09-03	X	X		
1455M91G01	Tube oil D scavenge	G.E.	72-09-03	X	X		
1456M67P01	Tube and hose, oil	G.E.	72-09-03	X	X		
1456M67P02	Tube and hose, oil	G.E.	72-09-03	X	X		
1456M67P03	Tube and hose, oil	G.E.	72-09-03	X	X		
1456M67P04	Tube and hose, oil	G.E.	72-09-03	X	X		
1456M67P07	Tube and hose, oil	G.E.	72-09-03	X	X		
1456M67P08	Tube and hose, oil	G.E.	72-09-03	X	X		
1456M67P12	Tube and hose, oil	G.E.	72-09-03	X	X		
1456M67P15	Tube and hose, oil	G.E.	72-09-03	X	X		
1456M67P16	Tube and hose, oil	G.E.	72-09-03	X	X		
1456M71G01	Tube air	G.E.	72-09-03	X	X		
1456M71G02	Tube air	G.E.	72-09-03	X	X		
1456M77G01	Tube air bore	G.E.	72-09-03	X	X		
1456M77G02	Tube air bore	G.E.	72-09-03	X	X		
1456M83G01	Oil tube - IDG cooling	G.E.	72-09-03	X	X		
1456M97G05	Tube air LPT cooling LS	G.E.	72-09-03	X	X		

4.1.2- CF6-80 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
1456M97G06	Tube air LPT cooling LS	G.E.	72-09-03	X	X		
1469M28G01	Tube LPR	G.E.	72-09-03	X	X		
1469M28G03	Tube LPR	G.E.	72-09-03	X	X		
1469M49P01	Tube and hose fuel VBV	G.E.	72-09-03	X	X		
1469M49P02	Tube and hose fuel VBV	G.E.	72-09-03	X	X		
1469M49P03	Tube and hose fuel VBV	G.E.	72-09-03	X	X		
1469M49P05	Tube and hose fuel VBV	G.E.	72-09-03	X	X		
1469M49P07	Tube and hose fuel VBV	G.E.	72-09-03	X	X		
1469M49P08	Tube and hose fuel VBV	G.E.	72-09-03	X	X		
1470M39G02	Manifold air cooling	G.E.	72-09-03	X	X		
1470M39G04	Manifold air cooling	G.E.	72-09-03	X	X		
1470M39G05	Manifold air cooling	G.E.	72-09-03	X	X		
1470M39G07	Manifold air cooling	G.E.	72-09-03	X	X		
1470M39G08	Manifold air cooling	G.E.	72-09-03	X	X		
1470M39G08A	Manifold air cooling	G.E.	72-09-03	X	X		
1470M39G09	Manifold air cooling	G.E.	72-09-03	X	X		
1473M24G01	Tube air	G.E.	72-09-03	X	X		
1473M25G01	Manifold air HPT active control	G.E.	72-09-03	X	X		
1473M25G02	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1473M25G03	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1473M25G04	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1473M25G05	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1473M25G10	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1473M25G11	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1473M25G12	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1473M25G15	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1473M26G01	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1473M26G02	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1473M26G03	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1473M38G01	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1473M38G02	Manifold HPT active	G.E.	72-09-03	X	X		
1473M38G03	Manifold HPT active	G.E.	72-09-03	X	X		
1473M38G04	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1473M38G05	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1473M38G06	Manifold HPT active	G.E.	72-09-03	X	X		
1473M38G07	Manifold HPT active	G.E.	72-09-03	X	X		
1473M38G08	Manifold HPT active clearance control	G.E.	72-09-03	X	X		

4.1.2- CF6-80 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
1473M38G09	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1473M38G10	Manifold HPT active	G.E.	72-09-03	X	X		
1473M38G11	Manifold HPT active	G.E.	72-09-03	X	X		
1473M38G12	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1473M38G13	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1473M38G14	Manifold HPT active	G.E.	72-09-03	X	X		
1473M38G15	Manifold HPT active	G.E.	72-09-03	X	X		
1473M38G16	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1473M38G17	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1473M38G18	Manifold HPT active	G.E.	72-09-03	X	X		
1473M38G19	Manifold HPT active	G.E.	72-09-03	X	X		
1473M38G20	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1473M38G21	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1473M38G22	Manifold HPT active	G.E.	72-09-03	X	X		
1473M38G23	Manifold HPT active	G.E.	72-09-03	X	X		
1473M38G24	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1473M60G01	Manifold HPT Active Clearance Control	GE	72-09-03	X	X		
1474M85G01	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1474M85G02	Manifold HPT active	G.E.	72-09-03	X	X		
1474M85G03	Manifold HPT active	G.E.	72-09-03	X	X		
1474M85G04	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1474M85G05	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1474M85G06	Manifold HPT active	G.E.	72-09-03	X	X		
1474M85G07	Manifold HPT active	G.E.	72-09-03	X	X		
1474M85G08	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1474M85G09	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1474M85G10	Manifold HPT active	G.E.	72-09-03	X	X		
1474M85G11	Manifold HPT active	G.E.	72-09-03	X	X		
1474M85G12	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1474M85G13	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1474M85G14	Manifold HPT active	G.E.	72-09-03	X	X		
1474M85G15	Manifold HPT active	G.E.	72-09-03	X	X		
1474M85G16	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1476M60G01	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1476M60G02	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1476M60G03	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1476M60G04	Manifold HPT active clearance control	G.E.	72-09-03	X	X		

4.1.2- CF6-80 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
1479M44G01	Manifold air LPT cooling LS	G.E.	72-09-03	X	X		
1479M44G02	Manifold air LPT cooling LS	G.E.	72-09-03	X	X		
1479M44G03	LPT cooling air manifold (gauche)	G.E.	72-09-03	X	X		
1479M44G04	LPT cooling air manifold (gauche)	G.E.	72-09-03	X	X		
1479M45G01	Manifold air LPT cooling RS	G.E.	72-09-03	X	X		
1479M45G02	Manifold air LPT cooling RS	G.E.	72-09-03	X	X		
1479M45G04	Manifold air LPT cooling RS	G.E.	72-09-03	X	X		
1492M56G01	Tube air HPT acc cooling	G.E.	72-09-03	X	X		
1492M56G03	Tube air HPT acc cooling	G.E.	72-09-03	X	X		
1492M56G05	Tube air HPT acc cooling	G.E.	72-09-03	X	X		
1492M56G07	Tube air HPT acc cooling	G.E.	72-09-03	X	X		
1492M98G01	Tube fuel drain	G.E.	72-09-03	X	X		
1517M11G01	Tube fuel drain modulating valve LS	G.E.	72-09-03	X	X		
1517M65G02	Manifold drain mast (neutral)	G.E.	72-09-03	X	X		
1517M65G03	Manifold drain mast (neutral)	G.E.	72-09-03	X	X		
1517M65G04	Manifold drain mast (neutral)	G.E.	72-09-03	X	X		
1536M60G13	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1536M60G14	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1536M60G15	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1536M60G16	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1539M97G06	Manifold HPT active clearance control FWD	G.E.	72-09-03	X	X		
1539M97G07	Manifold HPT active clearance control FWD	G.E.	72-09-03	X	X		
1539M97G08	Manifold HPT active clearance control FWD	G.E.	72-09-03	X	X		
1539M97G09	Manifold HPT active clearance control FWD	G.E.	72-09-03	X	X		
1539M97G10	Manifold HPT active clearance control FWD	G.E.	72-09-03	X	X		
1539M98G05	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1539M98G06	Manifold HPT active	G.E.	72-09-03	X	X		
1539M98G07	Manifold HPT active	G.E.	72-09-03	X	X		
1539M98G08	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1539M98G09	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1539M98G10	Manifold HPT active	G.E.	72-09-03	X	X		
1539M98G11	Manifold HPT active	G.E.	72-09-03	X	X		
1539M98G12	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1539M98G13	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1539M98G14	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1539M98G15	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1539M98G16	Manifold HPT active clearance control	G.E.	72-09-03	X	X		

4.1.2- CF6-80 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
1539M98G17	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1539M98G18	Manifold HPT active	G.E.	72-09-03	X	X		
1539M98G19	Manifold HPT active	G.E.	72-09-03	X	X		
1539M98G20	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1539M98G21	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1539M98G22	Manifold HPT active	G.E.	72-09-03	X	X		
1539M98G23	Manifold HPT active	G.E.	72-09-03	X	X		
1539M98G24	Manifold HPT active clearance control	G.E.	72-09-03	X	X		
1577M81G02	Tube fuel LPT modulating valve supply	G.E.	72-09-03	X	X		
1577M83G02	Tube fuel LPT modulating valve supply	G.E.	72-09-03	X	X		
1578M22G01	Tube air HP	G.E.	72-09-03	X	X		
1578M22G02	Tube air HP	G.E.	72-09-03	X	X		
1578M22G05	Tube air HP	G.E.	72-09-03	X	X		
1581M56P01	Hose oil	G.E.	72-09-03	X	X		
1581M56P02	Hose oil	G.E.	72-09-03	X	X		
1581M56P03	Hose oil	G.E.	72-09-03	X	X		
1581M56P04	Hose oil	G.E.	72-09-03	X	X		
1582M12G01	Tube C scavenge mid oil	G.E.	72-09-03	X	X		
1582M48G01	Tube VBV / VSV drain fuel	G.E.	72-09-03	X	X		
1606M20P01	Tube and hose air signal IDG cooling valve	G.E.	72-09-03	X	X		
1606M20P02	Tube and hose air signal IDG cooling valve	G.E.	72-09-03	X	X		
1606M20P03	Tube and hose air signal IDG cooling valve	G.E.	72-09-03	X	X		
1606M51G01	Tube air LPT supply	G.E.	72-09-03	X	X		
1606M51G02	Tube air LPT supply	G.E.	72-09-03	X	X		
1606M51G03	Tube air LPT supply	G.E.	72-09-03	X	X		
1606M51G04	Tube air LPT supply	G.E.	72-09-03	X	X		
1606M51G05	Tube air LPT supply	G.E.	72-09-03	X	X		
1606M51G06	Tube air LPT supply	G.E.	72-09-03	X	X		
1606M51G07	Tube air LPT supply	G.E.	72-09-03	X	X		
1642M40P01	Tube and hose oil CLG supply	G.E.	72-09-03	X	X		
1642M40P02	Tube and hose oil CLG supply	G.E.	72-09-03	X	X		
1642M40P03	Tube and hose oil CLG supply	G.E.	72-09-03	X	X		
1642M40P04	Tube and hose oil CLG supply	G.E.	72-09-03	X	X		
1642M40P05	Tube and hose oil CLG supply	G.E.	72-09-03	X	X		
1642M42P01	Tube and hose oil CLG RTN	G.E.	72-09-03	X	X		
1642M42P02	Tube and hose oil CLG RTN	G.E.	72-09-03	X	X		
1642M42P03	Tube and hose oil CLG RTN	G.E.	72-09-03	X	X		

4.1.2- CF6-80 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
1642M42P04	Tube and hose oil CLG RTN	G.E.	72-09-03	X	X		
1643M22G03	Accessory shield assembly	G.E.	72-09-03	X	X		
1643M22G05	Accessory shield assembly	G.E.	72-09-03	X	X		
1643M23G10	Accessory shield assembly	G.E.	72-09-03	X	X		
1643M23G11	Accessory shield assembly	G.E.	72-09-03	X	X		
1643M23G13	Accessory shield assembly	G.E.	72-09-03	X	X		
1643M49G02	Manifold-HPT Cooling Air	G.E.	72-09-03	X	X		
1643M72G01	Tube oil J box upper drain	G.E.	72-09-03	X	X		
1643M85G01	Tube LP Recoup	G.E.	72-09-03	X	X		
1647M37P01	Sleeve threaded (Manchon fileté)	G.E.	72-09-03	X	X		
1678M50G01	Tube air HPT supply	G.E.	72-09-03	X	X		
1678M54G02	Tube oil	G.E.	72-09-03	X	X		
1678M75G01	Tube air HPT supply	G.E.	72-09-03	X	X		
1678M75G03	Tube air HPT supply	G.E.	72-09-03	X	X		
1678M86G04	Tube air LPT supply	G.E.	72-09-03	X	X		
1678M86G05	Tube air LPT supply	G.E.	72-09-03	X	X		
1678M86G07	Tube air LPT supply	G.E.	72-09-03	X	X		
1679M24G01	Tube oil - fuel	G.E.	72-09-03	X	X		
1679M26P02	Tube fuel hose	G.E.	72-09-03	X	X		
1679M26P03	Tube fuel hose	G.E.	72-09-03	X	X		
1679M76G01	Manifold air LPT cooling LS	G.E.	72-09-03	X	X		
1679M77G01	LPT cooling air manifold (droite)	G.E.	72-09-03	X	X		
1679M77G02	Manifold air LPT cooling RS	G.E.	72-09-03	X	X		
1679M78G01	Manifold air LPT cooling LS	G.E.	72-09-03	X	X		
1679M78G02	Manifold air LPT cooling LS	G.E.	72-09-03	X	X		
1679M78G06	Manifold air LPT cooling LS	G.E.	72-09-03	X	X		
1679M78G08	Manifold air LPT cooling LS	G.E.	72-09-03	X	X		
1679M78G10	LPT cooling air manifold (gauche)	G.E.	72-09-03	X	X		
1679M78G12	LPT cooling air manifold (gauche)	G.E.	72-09-03	X	X		
1679M78G14	LPT cooling air manifold (gauche)	G.E.	72-09-03	X	X		
1679M78G16	LPT cooling air manifold (gauche)	G.E.	72-09-03	X	X		
1679M79G01	Manifold air LPT cooling RS	G.E.	72-09-03	X	X		
1679M79G03	Manifold air LPT cooling RS	G.E.	72-09-03	X	X		
1679M79G04	Manifold air LPT cooling RS	G.E.	72-09-03	X	X		
1679M79G08	Manifold air LPT cooling RS	G.E.	72-09-03	X	X		
1679M79G10	Manifold air LPT cooling RS	G.E.	72-09-03	X	X		
1679M79G12	LPT cooling air manifold (droite)	G.E.	72-09-03	X	X		

4.1.2- CF6-80 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
1679M79G16	LPT cooling air manifold (droite)	G.E.	72-09-03	X	X		
1706M59P09	Tube and hose oil CLG RTN	G.E.	72-09-03	X	X		
1706M61P01	Tube and hose oil CLG supply	G.E.	72-09-03	X	X		
1706M61P02	Tube and hose oil CLG supply	G.E.	72-09-03	X	X		
1707M52P01	Hose fuel	G.E.	72-09-03	X	X		
1707M52P03	Hose fuel	G.E.	72-09-03	X	X		
1707M54P01	Hose fuel	G.E.	72-09-03	X	X		
1707M54P02	Pipe fuel	G.E.	72-09-03	X	X		
1707M54P03	Hose fuel	G.E.	72-09-03	X	X		
1707M54P04	Pipe fuel	G.E.	72-09-03	X	X		
1707M54P05	Pipe fuel	G.E.	72-09-03	X	X		
1707M85G01	Manifold air LPT cooling RS	G.E.	72-09-03	X	X		
1707M85G03	LPT cooling air manifold (droite)	G.E.	72-09-03	X	X		
1707M85G04	Manifold air LPT cooling RS	G.E.	72-09-03	X	X		
1707M85G05	Manifold air LPT cooling RS	G.E.	72-09-03	X	X		
1749M96G02	Centerbody aft.	G.E.	78-12-02	X	X		
1774M75G01	Tube air LPT cooling	G.E.	72-09-03	X	X		
1774M75G02	Tube air LPT cooling	G.E.	72-09-03	X	X		
1775M13G02	Can drain fuel	G.E.	72-09-03	X	X		
1775M13G03	Can drain fuel	G.E.	72-09-03	X	X		
1800M10G02	Tube air LPT supply	G.E.	72-09-03	X	X		
1800M76P03	Tube fuel	G.E.	72-09-03	X	X		
1800M76P04	Tube fuel	G.E.	72-09-03	X	X		
1801M32G01	Manifold-HPT Cooling Air	G.E.	72-09-03	X	X		
1806M11G01	Centerbody FWD.	G.E.	78-12-01	X	X		
1806M75G01	Centerbody aft.	G.E.	78-12-02	X	X		
1806M79G01	Assembly Engine Mount Yoke	G.E.	71-21-01	X	X		
1806M80G01	Mount platform	G.E.	71-21-01	X	X		
1806M87G01	Mount platform	G.E.	71-21-01	X	X		
1810M73G01	Manifold air active clearance	G.E.	72-09-03	X	X		
1836M39G01	Manifold air active clearance	G.E.	72-09-03	X	X		
1836M41G01	Manifold	G.E.	72-09-03	X	X		
1836M93G02	Tube-oil J Box UPR drain	G.E.	72-09-03	X	X		
1872M21G01	Duct air	G.E.	72-09-03	X	X		
1872M21G02	Duct air	G.E.	72-09-03	X	X		
1872M21G03	Duct air	G.E.	72-09-03	X	X		
1872M21G04	Duct air	G.E.	72-09-03	X	X		

4.1.2- CF6-80 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
1872M21G06	Duct air	G.E.	72-09-03	X	X		
1872M21G08	Duct air	G.E.	72-09-03	X	X		
1872M94P01	Hose fuel	G.E.	72-09-03	X	X		
1967M33G01	Duct Air LP Recoup Aft	G.E.	72-09-03	X	X		
1977M71G01	Tube LP Recoup	G.E.	72-09-03	X	X		
1977M76P03	Tube and Hose Fuel	G.E.	72-09-03	X	X		
1977M97G01	Manifold air HPT active clearance control	G.E.	72-09-03	X	X		
1978M45G01	Manifold air HPT active clearance control	G.E.	72-09-03	X	X		
1978M77G01	Accessory shield assembly	G.E.	72-66-01	X	X		
1978M77G02	Accessory shield assembly	G.E.	72-66-01	X	X		
1978M77G03	Accessory shield assembly	G.E.	72-66-01	X	X		
1978M77G04	Accessory shield assembly	G.E.	72-66-01	X	X		
1978M77G05	Accessory shield assembly	G.E.	72-66-01	X	X		
1978M77G06	Accessory shield assembly	G.E.	72-66-01	X	X		
1978M77G10	Accessory shield assembly	G.E.	72-66-01	X	X		
1978M77G11	Accessory shield assembly	G.E.	72-66-01	X	X		
1978M77G12	Accessory shield assembly	G.E.	72-66-01	X	X		
1991M69G01	Tube RS recoup air	G.E.	72-09-03	X	X		
2155M35G01	Tube air core cowl	G.E.	72-09-03	X	X		
224-1400-9	Nozzle assy eng. Primary exhaust	Goodrich	78-10-04	X	X	X	
224-1400-15	Nozzle assy eng. Primary exhaust	Goodrich	78-10-04	X	X	X	
224-1400-17	Nozzle assy eng. Primary exhaust	Goodrich	78-10-04	X	X	X	
224-1401-503	Barrel Assy Nozzle Inner	Goodrich	78-10-04	X	X		
224-1401-505	Barrel Assy Nozzle Inner	Goodrich	78-10-04	X	X		
224-1401-507	Barrel Assy Nozzle Inner	Goodrich	78-10-04	X	X		
224-1402-501	Barrel Assy Nozzle Outer	Goodrich	78-10-04	X	X		
224-1501-503	Barrel Assy Exhaust Plug	Goodrich	78-10-03	X	X		
224-1502-503	Cone Assy Exhaust Plug	Goodrich	78-10-03		X		
224-4101-505	Duct assy UPR	G.E.	72-09-03	X	X		
224-4102-503	Duct assy	G.E.	72-09-03	X	X		
224-4201-507	Duct assy anti icing valve inlet	G.E.	72-09-03	X	X		
224-4201-509	Duct assy anti icing valve inlet	G.E.	72-09-03	X	X		
224-4202-505	Duct assy anti icing valve	G.E.	72-09-03	X	X		
224-4202-507	Duct assy anti icing valve	G.E.	72-09-03	X	X		
224-4203-503	Duct assy anti ice	G.E.	72-09-03	X	X		
224-4214-507	Elbow anti-icing engine	G.E.	72-09-03	X	X		
224-4251-501	Tube anti-ice	G.E.	72-09-03	X	X		

4.1.2- CF6-80 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
224-4251-505	Tube anti-ice	G.E.	72-09-03	X	X		
224-4252-501	Duct assy TR supply regulator valve attach	G.E.	72-09-03	X	X		
224D4301-503	Duct assy	G.E.	71-00-02	X	X		
224-4302-517	Manifold assy	G.E.	72-09-03	X	X		
224-4308-531	Tube assy regulator valve	G.E.	72-09-03	X	X		
224-4404-517	Tube assy - BHD tee to filter(PPK)	G.E.	72-09-03	X	X		
224-4404-521	Tube assy - BHD tee to filter(PPK)	G.E.	72-09-03	X	X		
224-4651-501	Tube Assy Pylon	G.E.	71-00-16	X	X		
224-4656-503	Nozzle Assy Tube	G.E.	71-00-16	X	X		
224-4704-501	Tube assy - fire detector	G.E.	72-09-03	X	X		
224-4704-503	Tube assy - fire detector	G.E.	72-09-03	X	X		
224-7001-501	Duct 8 th stage tee	G.E.	72-09-03	X	X		
224-7002-507	Duct 14 th stage tee	G.E.	72-09-03	X	X		
224-7101-501	Duct assy	G.E.	72-09-03	X	X		
224-7201-503	Duct assy FWD engine mount	G.E.	72-09-03	X	X		
224-7203-503	Duct assy fan case	G.E.	72-09-03	X	X		
224-7206-501	Duct assy-tripod supported	G.E.	72-09-03	X	X		
224-7214-501	Duct assy	G.E.	72-09-03	X	X		
224-9312-501	Manifold assy	G.E.	72-09-03	X	X		
2420M70G01	Fuel Manifold Right and Left Sides	G.E.	SB73-0365	X	X		X
2420M71G01	Fuel Manifold Right and Left Sides	G.E.	SB73-0365	X	X		X
2420M72G01	Fuel Manifold Right and Left Sides	G.E.	SB73-0365	X	X		X
2420M73G01	Fuel Manifold Right and Left Sides	G.E.	SB73-0365	X	X		X
332U2312-1	Duct assy – Low start	G.E.	72-09-03	X	X		
332U2321-7	Manifold duct assy	G.E.	72-09-03	X	X		
332U2324-7	Manifold duct assy	G.E.	72-09-03	X	X		
9011M20G02	Tube oil	G.E.	72-09-03	X	X		
9196M44G03	Centrifugeur d'huile	G.E.	72-21-14	X	X		
9196M44G04	Centrifugeur d'huile	G.E.	72-21-14	X	X		
9258M64G01	Tube air HPT cooling	G.E.	72-09-03	X	X		
9258M64G02	Tube air HPT cooling	G.E.	72-09-03	X	X		
9258M64G02	Tube air HPT cooling	G.E.	72-09-03	X	X		
9258M64G03	Tube air HPT cooling	G.E.	72-09-03	X	X		
9258M64G03	Tube air HPT cooling	G.E.	72-09-03	X	X		
9258M66G01	Tee air HPT cooling	G.E.	72-09-03	X	X		
9258M66G05	Tee air HPT cooling	G.E.	72-09-03	X	X		
9258M67G01	Elbow air HPT cooling	G.E.	72-09-03	X	X		

4.1.2- CF6-80 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
9285M39P10	Hose oil	G.E.	72-09-03	X	X		
9285M39P11	Hose oil	G.E.	72-09-03	X	X		
9287M94P01	Sleeve threaded	G.E.	72-09-03	X	X		
9295M10G02	Tube scav sump, CPRSR rear FR	G.E.	72-09-03	X	X		
9295M25G06	Manifold cooling LPT lower	G.E.	72-09-03	X	X		
9295M25G08	Manifold cooling LPT lower	G.E.	72-09-03	X	X		
9298M75G03	Y fuel manifold	G.E.	72-09-03	X	X		
9298M75G05	Y fuel manifold	G.E.	72-09-03	X	X		
9333M48G01	Duct assy-recoup LH	G.E.	72-09-03	X	X		
9333M62G02	Nozzle Primary	G.E.	78-11-01	X	X		
9333M62G03	Nozzle Primary	G.E.	78-11-01	X	X		
9333M63G01	Center Body-FWD	G.E.	78-12-01	X	X		
9333M68P01	Center Body-AFT	G.E.	78-12-02	X	X		
9344M44G01	Tube air	G.E.	72-09-03	X	X		
9352M54G01	Tube D scavenge	G.E.	72-09-03	X	X		
9352M56G01	Tube C scavenge	G.E.	72-09-03	X	X		
9354M93G01	Tube air	G.E.	72-09-03	X	X		
9354M93G02	Tube air	G.E.	72-09-03	X	X		
9361M22G01	Tube air	G.E.	72-09-03	X	X		
9361M24G02	Manifold air	G.E.	72-09-03	X	X		
9361M24G03	Manifold air	G.E.	72-09-03	X	X		
9361M24G04	Manifold air	G.E.	72-09-03	X	X		
9361M26G01	Manifold air	G.E.	72-09-03	X	X		
9361M26G02	Manifold air	G.E.	72-09-03	X	X		
9361M72G01	Manifold air LPT	G.E.	72-09-03	X	X		
9361M72G02	Manifold air LPT	G.E.	72-09-03	X	X		
9363M84G01	Manifold air CDP	G.E.	72-09-03	X	X		
9369M54G02	Tube LPT cooling mid air	G.E.	72-09-03	X	X		
9369M54G04	Tube LPT cooling mid air	G.E.	72-09-03	X	X		
9369M56G02	Tube LPT cooling aft air	G.E.	72-09-03	X	X		
9369M58G01	Manifold air	G.E.	72-09-03	X	X		
9371M50G01	Tube air mid section fwd	G.E.	72-09-03	X	X		
9371M52G01	Tube air mid section aft	G.E.	72-09-03	X	X		
9377M36G05	Manifold fuel drain	G.E.	72-09-03	X	X		
9377M36G06	Manifold fuel drain	G.E.	72-09-03	X	X		
9377M36G07	Manifold fuel drain	G.E.	72-09-03	X	X		
9378M67P02	Tube and hose vent oil	G.E.	72-09-03	X	X		

4.1.2- CF6-80 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
9378M67P03	Tube and hose vent oil	G.E.	72-09-03	X	X		
9378M67P04	Tube and hose vent oil	G.E.	72-09-03	X	X		
9378M73G02	Tube transition	G.E.	72-09-03	X	X		
9378M73G03	Tube transition	G.E.	72-09-03	X	X		
9378M77P01	Tube- Ferrule	G.E.	72-09-03	X	X		
9378M82G01	Tee-air HP recoup	G.E.	72-09-03	X	X		
9378M83G02	Tube air HP recoup upper	G.E.	72-09-03	X	X		
9378M83G03	Tube air HP recoup upper	G.E.	72-09-03	X	X		
9378M83G04	Tube air HP recoup upper	G.E.	72-09-03	X	X		
9378M85G01	Tube air HP recoup lower	G.E.	72-09-03	X	X		
9378M85G02	Tube air HP recoup lower	G.E.	72-09-03	X	X		
9378M85G03	Tube air HP recoup lower	G.E.	72-09-03	X	X		
9381M78G01	Tube scavenge	G.E.	72-09-03	X	X		
9382M36G02	Tube air HPR	G.E.	72-09-03	X	X		
9383M43G08	Mount yoke	G.E.	71-21-01	X	X		
9383M43G10	Mount yoke	G.E.	71-21-01	X	X		
9383M43G11	Mount yoke	G.E.	71-21-01	X	X		
9383M43G13	Mount yoke	G.E.	71-21-01	X	X		
9383M43G14	Mount yoke	G.E.	71-21-01	X	X		
9392M13G01	Tube oil in	G.E.	72-09-03	X	X		
9392M13G02	Tube oil in	G.E.	72-09-03	X	X		
9392M13G03	Tube oil in	G.E.	72-09-03	X	X		
9673M66G10	Actuator lever	G.E.	72-32-10	X	X		
9673M66G13	Actuator lever	G.E.	72-32-10	X	X		
9673M66G21	Lever Assembly Actuation	G.E.	72-32-10	X	X		
96883-6-167	Hose fuel	G.E.	72-09-03	X	X		
AE706825-11	Hose Assy	G.E.	72-09-03	X	X		
AS1635A20H0214	Hose Assy	G.E.	72-09-03	X	X		
J177H0181D	Hose -tray drain fuel	G.E.	72-09-03	X	X		
J177H0181E	Hose -tray drain fuel	G.E.	72-09-03	X	X		
J177H0181F	Hose -tray drain fuel	G.E.	72-09-03	X	X		
J178F0125A	Hose fuel	G.E.	72-09-03	X	X		
J178F0125B	Hose fuel	G.E.	72-09-03	X	X		
J178F0125C	Hose fuel	G.E.	72-09-03	X	X		
J178F0125G	Hose fuel	G.E.	72-09-03	X	X		
J178H0171A	Hose -tray drain fuel	G.E.	72-09-03	X	X		
J178H0171B	Hose -tray drain fuel	G.E.	72-09-03	X	X		

4.1.2- CF6-80 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
J178H0171C	Hose -tray drain fuel	G.E.	72-09-03	X	X		
J179E0110A	Hose	G.E.	72-09-03	X	X		
J179E0145D	Hose teflon	G.E.	72-09-03	X	X		
J179H0100A	Hose oil	G.E.	72-09-03	X	X		
J179H0100C	Hose oil	G.E.	72-09-03	X	X		
J179H0100G	Hose oil	G.E.	72-09-03	X	X		
J179H0100L	Hose oil	G.E.	72-09-03	X	X		
J179H0100R	Hose fuel	G.E.	72-09-03	X	X		
J180H0086C170	Hose drain	G.E.	72-09-03	X	X		
J181D0147A231	Hose teflon	G.E.	72-09-03	X	X		
J186L0584A180	Hose oil	G.E.	72-09-03	X	X		
J186L0584C180	Hose oil	G.E.	72-09-03	X	X		
J186L0584E180	Hose oil	G.E.	72-09-03	X	X		
J191H0084A	Hose teflon oil	G.E.	72-09-03	X	X		
J191H0084G	Hose teflon oil	G.E.	72-09-03	X	X		
J191H0084P	Hose teflon oil	G.E.	72-09-03	X	X		
J191H0084S	Hose teflon oil	G.E.	72-09-03	X	X		
J191H0084T	Hose teflon oil	G.E.	72-09-03	X	X		
J262D0040CA	Hose med press netral	G.E.	72-09-03	X	X		
J262D0040DA	Hose med press netral	G.E.	72-09-03	X	X		
J262D0040FA	Hose med press netral	G.E.	72-09-03	X	X		
J1276E0094DAB	Hose Fuel HPT LPTCC return	G.E.	72-09-03	X	X		
MS8000G040AC	Hose med press netral	G.E.	72-09-03	X	X		
MS8000G094CA	Hose	G.E.	72-09-03	X	X		
MS8000G110CA	Hose	G.E.	72-09-03	X	X		
MS8000G145CA	Hose teflon	G.E.	72-09-03	X	X		
MS8000H125BA	Hose fuel	G.E.	72-09-03	X	X		
MS8000K181AA	Hose -tray drain fuel	G.E.	72-09-03	X	X		
MS8002K084CA	Hose teflon oil	G.E.	72-09-03	X	X		
MS8005F147EA231	Hose teflon	G.E.	72-09-03	X	X		
MS8005G094CA	Hose	G.E.	72-09-03	X	X		
MS8005H125BA	Hose -tray drain fuel	G.E.	72-09-03	X	X		
R5077G164A	Hose -tray drain fuel	G.E.	72-09-03	X	X		
S41508-0125	Hose fuel	G.E.	72-09-03	X	X		
S41612-0100L	Hose TFL	G.E.	72-09-03	X	X		

4.1.3- CF6-50 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
97608	Hose Assy Fire Resistant	G.E.	72-09-03	X	X		
106383-4	Tube and Hose Fuel-Rod end	G.E.	72-09-03	X	X		
108167-3	Hose assy	G.E.	72-09-03	X	X		
1099M37G01	Tube assy filter to cooler oil	G.E.	72-09-03	X	X		
1099M58G01	Tube assy oil	G.E.	72-09-03	X	X		
1099M60G01	Tube assy oil	G.E.	72-09-03	X	X		
1100M14G01	Tube fuel	G.E.	72-09-03	X	X		
1101M52G01	Manifold air stage 7th	G.E.	72-09-03	X	X		
1102M64G01	Tube assy air	G.E.	72-09-03	X	X		
1102M66G01	Manifold assy RH	G.E.	72-09-03	X	X		
1102M66G02	Manifold assy RH	G.E.	72-09-03	X	X		
1102M68G01	Manifold assy RH	G.E.	72-09-03	X	X		
1306M10G01	Manifold assy air	G.E.	72-09-03	X	X		
1313M55G01	Forward center body	G.E.	78-11-02	X	X		
1313M55G02	Forward center body	G.E.	78-11-02	X	X		
1313M56G01	Aft center body	G.E.	78-11-01	X	X		
1313M74G01	Forward center body	G.E.	78-12-02	X	X	X	X
1313M74G02	Forward center body	G.E.	78-12-02	X	X	X	X
1313M74G03	Forward center body	G.E.	78-12-02	X	X	X	X
1320M95G02	Manifold assy air IGN CLG	G.E.	72-09-03	X	X		
1320M98G01	Tube assy HPR air	G.E.	72-09-03	X	X		
1379M50G01	Tube assy air	G.E.	72-09-03	X	X		
1379M50G02	Tube assy air	G.E.	72-09-03	X	X		
1379M50G05	Tube assy air	G.E.	72-09-03	X	X		
1379M51G02	Tube air cooling LPT	G.E.	72-09-03	X	X		
1379M51G05	Tube air cooling LPT	G.E.	72-09-03	X	X		
1379M52G05	Tube assy air strut n°6	G.E.	72-09-03	X	X		
1379M53G01	Tube assy air strut n°7	G.E.	72-09-03	X	X		
1379M53G02	Tube assy air strut n°7	G.E.	72-09-03	X	X		
1379M53G05	Tube assy air strut n°7	G.E.	72-09-03	X	X		
1379M54G01	Tube assy air strut n°8	G.E.	72-09-03	X	X		
1379M54G05	Tube assy air strut n°8	G.E.	72-09-03	X	X		
1472M53G01	Tube assy oil inlet	G.E.	72-09-03	X	X		
1555M14G04	Tube assy stage 14 CDP air	G.E.	72-09-03	X	X		
1555M21G02	Tube air HPR air	G.E.	72-09-03	X	X		
1555M23G01	Tube assy stage 14 CDP air	G.E.	72-09-03	X	X		
1756M26G01	Tube assy NOZ feeder shrouded	G.E.	72-09-03	X	X		

4.1.3- CF6-50 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
1756M28P01	Tube assy NOZ feeder shrouded	G.E.	72-09-03	X	X		
1756M38G01	Tube oil	G.E.	72-09-03	X	X		
1756M46G01	Tube oil pylon	G.E.	72-09-03	X	X		
1756M72P03	Tube and hose fuel HD end module E	G.E.	72-09-03	X	X		
1756M72P04	Tube and hose fuel HD end module E	G.E.	72-09-03	X	X		
1756M94G01	Manifold assy stage 8th air	G.E.	72-09-03	X	X		
1809M11G01	Tube assy NOZ feeder shrouded	G.E.	72-09-03	X	X		
2204M36G01	Center Body Assy Forward	G.E.	78-11-02	X	X	X	X
2204M36G02	Center Body Assy Forward	G.E.	78-11-02	X	X		
2204M36G03	Center Body Assy Forward	G.E.	78-11-02	X	X	X	X
2204M36G04	Center Body Assy Forward	G.E.	78-11-02	X	X	X	X
2204M36G05	Center Body Assy FWD	GE	78-11-02	X	X		
2204M36G06	Center Body Assy Forward	G.E.	78-11-02	X	X	X	X
2204M36G07	Center Body Assy Forward	G.E.	78-11-02	X	X	X	X
2204M36G08	Center Body Assy Forward	G.E.	78-11-02	X	X	X	X
2204M37G01	Centerbody Aft	GE	78-11-02	X	X	X	X
2204M37G02	Center Body assy After	G.E.	78-11-02	X	X		
9005M66G02	Manifold pylon oil	G.E.	72-09-03	X	X		
9008M43G03	Y shaped fuel manifold assy	G.E.	72-09-03	X	X		
9008M43G05	Y shaped fuel manifold assy	G.E.	72-09-03	X	X		
9008M43G06	Y shaped fuel manifold assy	G.E.	72-09-03	X	X		
9011M20G02	Tube assy oil	G.E.	72-09-03	X	X		
9037M85G01	Tube air vent B. sump FWD	G.E.	72-09-03	X	X		
9042M45G02	Elbow assy LPT	G.E.	72-09-03	X	X		
9042M46G01	Elbow assy HPT	G.E.	72-09-03	X	X		
9042M57G01	Tube assy lower aft HPT air	G.E.	72-09-03	X	X		
9042M57G02	Tube assy lower aft HPT air	G.E.	72-09-03	X	X		
9042M59G02	Tube assy left side air	G.E.	72-09-03	X	X		
9042M60G01	Tube assy upper aft HPT air	G.E.	72-09-03	X	X		
9042M60G02	Tube assy upper aft HPT air	G.E.	72-09-03	X	X		
9042M63G01	Tube assy lower aft HPT air	G.E.	72-09-03	X	X		
9042M63G02	Tube assy lower aft HPT air	G.E.	72-09-03	X	X		
9042M66G01	Tube assy air	G.E.	72-09-03	X	X		
9042M72G01	Tube assy filter to cooler oil	G.E.	72-09-03	X	X		
9043M25G02	Manifold assy mid oil	G.E.	72-09-03	X	X		
9043M43G02	Manifold assy actuator	G.E.	72-09-03	X	X		
9043M43G03	Manifold assy actuator	G.E.	72-09-03	X	X		

4.1.3- CF6-50 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
9043M44G02	Manifold assy actuator	G.E.	72-09-03	X	X		
9043M44G03	Manifold assy actuator	G.E.	72-09-03	X	X		
9043M55G01	Tube assy aft B. sump vent	G.E.	72-09-03	X	X		
9043M55G03	Tube assy aft B. sump vent	G.E.	72-09-03	X	X		
9043M85G01	Tube assy aft oil	G.E.	72-09-03	X	X		
9043M85G02	Tube oil	G.E.	72-09-03	X	X		
9043M98P01	Tube oil	G.E.	72-09-03	X	X		
9047M48P07	Fairing	G.E.	72-09-03	X	X		
9047M48P08	Fairing	G.E.	72-09-03	X	X		
9047M48P09	Fairing	G.E.	72-09-03	X	X		
9047M89P01	Duct vent CRF	G.E.	72-09-03	X	X		
9047M89P02	Duct vent CRF	G.E.	72-09-03	X	X		
9053M14G02	Manifold assy gearbox	G.E.	72-09-03	X	X		
9053M14G03	Manifold assy gearbox	G.E.	72-09-03	X	X		
9053M18G01	Tube assy oil pump	G.E.	72-09-03	X	X		
9053M19G03	Tube assy C & D oil	G.E.	72-09-03	X	X		
9053M27G01	Tube oil supp.	G.E.	72-09-03	X	X		
9053M31G02	Tube assy fwd D scavenge oil	G.E.	72-09-03	X	X		
9053M78G01	Tube air HPT	G.E.	72-09-03	X	X		
9053M79G01	Tube assy upper fwd HPT air	G.E.	72-09-03	X	X		
9053M80G02	Tube assy upper fwd air	G.E.	72-09-03	X	X		
9053M85G02	Tube assy anti-icing air	G.E.	72-09-03	X	X		
9054M44G01	Tube assy mid oil	G.E.	72-09-03	X	X		
9054M51G01	Tube assy HPR air	G.E.	72-09-03	X	X		
9054M51G02	Tube assy HPR air	G.E.	72-09-03	X	X		
9054M51G03	Tube assy HPR air	G.E.	72-09-03	X	X		
9054M52G01	Tube air HPR air	G.E.	72-09-03	X	X		
9054M52G02	Tube air HPR air	G.E.	72-09-03	X	X		
9054M92G02	Tube air HP recoup.	G.E.	72-09-03	X	X		
9055M70G02	Tube assy oil	G.E.	72-09-03	X	X		
9055M93G01	Tube assy mid oil	G.E.	72-09-03	X	X		
9057M76P01	Tube and hose RET	G.E.	72-09-03	X	X		
9057M84G02	Tube assy stage 14 CDP air	G.E.	72-09-03	X	X		
9057M84G03	Tube assy stage 14 CDP air	G.E.	72-09-03	X	X		
9057M85G02	Tube assy aft air supply	G.E.	72-09-03	X	X		
9057M85G03	Tube assy aft air supply	G.E.	72-09-03	X	X		
9061M13G04	Manifold assy-LP Turb CLG	G.E.	72-09-03	X	X		

4.1.3- CF6-50 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
9061M13G05	Manifold assy-LP Turb CLG	G.E.	72-09-03	X	X		
9061M14G05	Manifold assy-LP Turb CLG	G.E.	72-09-03	X	X		
9061M14G07	Manifold assy-LP Turb CLG	G.E.	72-09-03	X	X		
9062M58P01	Insulation blanket	G.E.	72-09-03	X	X		
9062M58P04	Insulation blanket	G.E.	72-09-03	X	X		
9062M59P01	Insulation blanket	G.E.	72-09-03	X	X		
9062M59P04	Insulation blanket	G.E.	72-09-03	X	X		
9062M67G01	Tube-oil impingement	G.E.	72-09-03	X	X		
9062M68G01	Manifold assy oil	G.E.	72-09-03	X	X		
9062M70G01	Tube assy seal drain	G.E.	72-09-03	X	X		
9062M70G02	Tube assy seal drain	G.E.	72-09-03	X	X		
9062M72G04	Tube - scavenge	G.E.	72-09-03	X	X		
9062M73G01	Tube assy sump	G.E.	72-09-03	X	X		
9062M73G02	Tube assy sump	G.E.	72-09-03	X	X		
9062M73G05	Tube assy sump	G.E.	72-09-03	X	X		
9062M77P02	Insulation blanket	G.E.	72-09-03	X	X		
9062M77P07	Insulation blanket	G.E.	72-09-03	X	X		
9063M17G02	Tube assy scavenge	G.E.	72-09-03	X	X		
9063M17G03	Tube assy scavenge	G.E.	72-09-03	X	X		
9064M91P02	Outer OGV vane airfoil	G.E.	72-09-03	X	X		
9064M91P03	Outer OGV vane airfoil	G.E.	72-09-03	X	X		
9066M67G02	Oil manifold	G.E.	72-09-03	X	X		
9067M29G01	Tube assy HPR air	G.E.	72-09-03	X	X		
9067M34G07	Manifold assy CDP	G.E.	72-09-03	X	X		
9067M34G08	Manifold assy CDP	G.E.	72-09-03	X	X		
9067M52G01	Tube air B sump aft	G.E.	72-09-03	X	X		
9067M69G01	Tube assy pylon oil	G.E.	72-09-03	X	X		
9067M70G01	Tube oil pylon	G.E.	72-09-03	X	X		
9067M72P01	Hose oil	G.E.	72-09-03	X	X		
9067M76G01	Manifold assy LPR	G.E.	72-09-03	X	X		
9068M20G01	Tube assy temperature return aft air	G.E.	72-09-03	X	X		
9068M38G01	Tube assy oil	G.E.	72-09-03	X	X		
9068M39G01	Tube oil D scavenge	G.E.	72-09-03	X	X		
9068M40G01	Tube assy stage 14 CDP air	G.E.	72-09-03	X	X		
9068M41G02	Manifold flowmeter to firewall	G.E.	72-09-03	X	X		
9068M44G01	Manifold fuel	G.E.	72-09-03	X	X		
9068M54G01	Tube assy C sump aft pressurization	G.E.	72-09-03	X	X		

4.1.3- CF6-50 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
9068M54G03	Tube assy C sump aft pressurization	G.E.	72-09-03	X	X		
9068M55G01	Tube assy C sump mid pressurization	G.E.	72-09-03	X	X		
9068M59G01	Tube assy C sump fwd pressurization	G.E.	72-09-03	X	X		
9068M67G01	Manifold assy fuel comp inlet	G.E.	72-09-03	X	X		
9068M67G02	Manifold assy fuel comp inlet	G.E.	72-09-03	X	X		
9068M70G01	Tube fwd lube oil inlet	G.E.	72-09-03	X	X		
9068M87G02	Manifold assy stage 14 CDP air (RH)	G.E.	72-09-03	X	X		
9069M70G01	Tube assy LPT manifold supply	G.E.	72-09-03	X	X		
9070M34G01	Tube assy pylon	G.E.	72-09-03	X	X		
9070M35G01	Tube assy NOZ feeder shrouded	G.E.	72-09-03	X	X		
9070M35G03	Tube assy NOZ feeder shrouded	G.E.	72-09-03	X	X		
9070M35G05	Tube assy NOZ feeder shrouded	G.E.	72-09-03	X	X		
9070M54G01	Manifold assy upper aft air	G.E.	72-09-03	X	X		
9070M57G01	Manifold assy shrouded fuel (LH)	G.E.	72-09-03	X	X		
9070M57G02	Manifold assy shrouded fuel (LH)	G.E.	72-09-03	X	X		
9070M57G03	Manifold assy shrouded fuel (RH)	G.E.	72-09-03	X	X		
9070M57G04	Manifold assy shrouded fuel (RH)	G.E.	72-09-03	X	X		
9070M78P01	Tube and hose ACTR end	G.E.	72-09-03	X	X		
9070M79P01	Tube and hose ACTR HD end	G.E.	72-09-03	X	X		
9070M80P01	Tube and hose fuel HD end module E	G.E.	72-09-03	X	X		
9070M81P01	Tube and hose fuel rod end	G.E.	72-09-03	X	X		
9076M28G06	Forward center body	G.E.	78-11-02	X	X		
9076M46G02	Aft center body	G.E.	78-11-01	X	X		
9076M46G04	Aft center body	G.E.	78-11-01	X	X		
9076M46G05	Aft center body	G.E.	78-11-01	X	X		
9080M89G01	Manifold ass'y a sup vent	G.E.	72-09-03	X	X		
9080M89G03	Manifold ass'y a sup vent	G.E.	72-09-03	X	X		
9080M89G04	Manifold ass'y a sup vent	G.E.	72-09-03	X	X		
9080M96G01	Bracket	G.E.	72-32-11	X	X		
9080M96G02	Bracket	G.E.	72-32-11	X	X		
9081M81P01	Sleeve threaded	G.E.	72.24.03	X	X		
9081M92G06	Center vent. air TMF	G.E.	72-09-03	X	X		
9081M92G07	Center vent. air TMF	G.E.	72-09-03	X	X		
9105M30G02	Turbine reverser deactivation assy	G.E.	72-09-03	X	X		
9105M60G01	Exhaust Nozzle Assy	G.E.	78-12-01	X	X	X	X
9105M60G02	Exhaust Nozzle Assy	G.E.	78-12-01	X	X	X	X
9105M60G03	Exhaust Nozzle Assy	G.E.	78-12-01	X	X	X	X

4.1.3- CF6-50 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
9105M90G05	Long Fixed Core Exhaust Nozzle (DC10 wing)	G.E.	72-09-03	X	X		
9105M90G06	Long Fixed Core Exhaust Nozzle (DC10 tail)	G.E.	72-09-03	X	X		
9105M90G07	Long Fixed Core Exhaust Nozzle (A300)	G.E.	72-09-03	X	X		
9105M90G08	Long Fixed Core Exhaust Nozzle (B747-200)	G.E.	72-09-03	X	X		
9118M43G01	Manifold assy air IGN CLG	G.E.	72-09-03	X	X		
9118M73G01	Tube air LPT	G.E.	72-09-03	X	X		
9118M74G01	Tube assy B sump	G.E.	72-09-03	X	X		
9118M85G02	Manifold assy stage 8th air	G.E.	72-09-03	X	X		
9120M10G01	Tube assy FWD air	G.E.	72-09-03	X	X		
9120M43G01	Manifold assy fuel rod end	G.E.	72-09-03	X	X		
9120M43G02	Manifold assy fuel rod end	G.E.	72-09-03	X	X		
9120M43G03	Manifold assy fuel rod end	G.E.	72-09-03	X	X		
9120M44G02	Manifold air LPT	G.E.	72-09-03	X	X		
9121M13G01	Tube oil D scavenge	G.E.	72-09-03	X	X		
9121M13G02	Tube oil D scavenge	G.E.	72-09-03	X	X		
9121M42G01	Tube air LPT	G.E.	72-09-03	X	X		
9121M42G02	Tube air LPT	G.E.	72-09-03	X	X		
9121M42G03	Tube air LPT	G.E.	72-09-03	X	X		
9126M39P01	Tube and hose fuel SIG	G.E.	72-09-03	X	X		
9126M89G01	Tube air VBV	G.E.	72-09-03	X	X		
9127M33G02	Tube assy oil inlet	G.E.	72-09-03	X	X		
9127M33G03	Tube assy oil inlet	G.E.	72-09-03	X	X		
9127M79G01	Cap strut n°5	G.E.	72-09-03	X	X		
9127M79G03	Cap strut n°4	G.E.	72-09-03	X	X		
9127M79G04	Cap strut n°5	G.E.	72-09-03	X	X		
9127M79G05	Cap strut n°5	G.E.	72-09-03	X	X		
9127M79G06	Cap strut n°5	G.E.	72-09-03	X	X		
9128M49G01	Cap strut n°2	G.E.	72-09-03	X	X		
9128M66G01	Tube assy inner scavenge	G.E.	72-09-03	X	X		
9128M98G01	Tube assy oil inlet	G.E.	72-09-03	X	X		
9137M89G01	Tube assy scavenge	G.E.	72-09-03	X	X		
9139M46G01	Tube assy scavenge	G.E.	72-09-03	X	X		
9141M45G01	Tube air TMF	G.E.	72-09-03	X	X		
9141M95G02	Manifold air TMF	G.E.	72-09-03	X	X		
9141M95G03	Manifold air TMF	G.E.	72-09-03	X	X		
9141M97G02	Tube air TMF	G.E.	72-09-03	X	X		
9141M97G04	Tube air TMF	G.E.	72-09-03	X	X		

4.1.3- CF6-50 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
9142M95G07	Long Fixed Core Exhaust Nozzle	G.E.	78-13-00	X	X		
9142M95G08	Long Fixed Core Exhaust Nozzle	G.E.	78-13-00	X	X		
9143M50G01	Tube assy oil inlet	G.E.	72-09-03	X	X		
9143M55G02	Cap strut n°5	G.E.	72-09-03	X	X		
9143M55G03	Cap strut n°4	G.E.	72-09-03	X	X		
9143M55G04	Cap strut n°5	G.E.	72-09-03	X	X		
9143M55G05	Cap strut n°5	G.E.	72-09-03	X	X		
9143M55G06	Cap strut n°5	G.E.	72-09-03	X	X		
9143M57G01	Cap strut n°2	G.E.	72-09-03	X	X		
9144M32G01	Tube assy air strut n°6	G.E.	72-09-03	X	X		
9144M34G01	Tube assy air strut n°7	G.E.	72-09-03	X	X		
9144M36G01	Tube assy air strut n°8	G.E.	72-09-03	X	X		
9144M38G01	Manifold air stage 7th	G.E.	72-09-03	X	X		
9144M57G01	Manifold assy RH	G.E.	72-09-03	X	X		
9149M27G01	Tube air vent B. sump FWD	G.E.	72-09-03	X	X		
9150M17G01	Coupling assy LP LPT CLG	G.E.	72-09-03	X	X		
9150M17G02	Coupling assy LP LPT CLG	G.E.	72-09-03	X	X		
9150M49G02	Manifold air TMF	G.E.	72-09-03	X	X		
9150M49G03	Manifold air TMF	G.E.	72-09-03	X	X		
9150M66G02	Tube air B sump aft	G.E.	72-09-03	X	X		
9150M66G03	Tube air B sump aft	G.E.	72-09-03	X	X		
9155M68G01	Tube assy scavenge	G.E.	72-09-03	X	X		
9170M55P03	Tube and hose fuel SIG	G.E.	72-09-03	X	X		
9170M56P03	Tube and hose fuel rod end	G.E.	72-09-03	X	X		
9170M59P03	Tube and hose ACTR HD end	G.E.	72-09-03	X	X		
9170M62P03	Tube and hose ACTR end	G.E.	72-09-03	X	X		
9170M63P03	Tube and hose fuel HD end module E	G.E.	72-09-03	X	X		
9170M63P04	Tube and hose fuel HD end module E	G.E.	72-09-03	X	X		
9170M64P03	Hose oil	G.E.	72-09-03	X	X		
9170M66P01	Tube and hose RET	G.E.	72-09-03	X	X		
9170M66P03	Tube and hose RET	G.E.	72-09-03	X	X		
9170M66P04	Tube and hose RET	G.E.	72-09-03	X	X		
9170M67P06	Tube oil	G.E.	72-09-03	X	X		
9172M51P03	Hose oil	G.E.	72-09-03	X	X		
9176M12G01	Tube oil scavenge	G.E.	72-09-03	X	X		
9176M14G01	Tube assy B sump oil	G.E.	72-09-03	X	X		
9176M16G01	Tube oil C scavenge	G.E.	72-09-03	X	X		

4.1.3- CF6-50 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
9176M18G01	Tube oil scavenge	G.E.	72-09-03	X	X		
9176M20G01	Tube oil scavenge	G.E.	72-09-03	X	X		
9176M22G01	Tube fwd lube oil inlet	G.E.	72-09-03	X	X		
9176M25G01	Tube oil supp.	G.E.	72-09-03	X	X		
9176M54G01	Manifold air LPT	G.E.	72-09-03	X	X		
9178M62G01	Manifold assy upper aft air	G.E.	72-09-03	X	X		
9178M62G02	Manifold assy upper aft air	G.E.	72-09-03	X	X		
9178M63G01	Manifold assy air	G.E.	72-09-03	X	X		
9178M64G01	Tube air LPT	G.E.	72-09-03	X	X		
9178M65G01	Tube air HP recoup.	G.E.	72-09-03	X	X		
9178M65G02	Tube air HP recoup.	G.E.	72-09-03	X	X		
9178M65G03	Tube air HP recoup.	G.E.	72-09-03	X	X		
9181M17G01	Tube case exhaust	G.E.	72-09-03	X	X		
9183M33G02	Exhaust nozzle	GE	78-12-01	X	X		
9183M35G02	Forward center body	G.E.	78-12-02	X	X	X	X
9183M35G03	Forward center body	G.E.	78-12-02	X	X	X	X
9183M35G04	Forward center body	G.E.	78-12-02	X	X	X	X
9183M36G02	Short aft center body	G.E.	72-09-03	X	X		
9185M62G01	Manifold ass'y - a sup vent	G.E.	72-09-03	X	X		
9183M63G01	Exhaust nozzle	GE	78-12-01	X	X		
9183M67G01	Forward center body	G.E.	78-12-02	X	X	X	X
9187M47G01	Tube oil	G.E.	72-09-03	X	X		
9191M22G01	Tube assy anti-icing air	G.E.	72-09-03	X	X		
9191M23G01	Tube assy anti-icing air	G.E.	72-09-03	X	X		
9191M38G01	Tube assy filter to cooler oil	G.E.	72-09-03	X	X		
9191M72G01	Tube oil	G.E.	72-09-03	X	X		
9194M14G02	Manifold assy stage 8th air	G.E.	72-09-03	X	X		
9194M18G01	Tube oil	G.E.	72-09-03	X	X		
9194M33P03	Hose oil	G.E.	72-09-03	X	X		
9194M61G01	Tube assy temp FWD air	G.E.	72-09-03	X	X		
9194M76P05	Tube and hose ACTR end	G.E.	72-09-03	X	X		
9194M76P07	Tube and hose ACTR end	G.E.	72-09-03	X	X		
9194M77P03	Tube and hose ACTR HD end	G.E.	72-09-03	X	X		
9194M77P04	Tube and hose ACTR HD end	G.E.	72-09-03	X	X		
9194M77P05	Tube and hose ACTR HD end	G.E.	72-09-03	X	X		
9196M44G01	Centrifugeur d'huile	G.E.	72-09-03	X	X		
9196M44G03	Centrifugeur d'huile	G.E.	72-09-03	X	X		

4.1.3- CF6-50 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
9200M10G01	Tube oil	G.E.	72-09-03	X	X		
9200M11G01	Manifold assy mid oil	G.E.	72-09-03	X	X		
9200M15G01	Tube assy mid oil	G.E.	72-09-03	X	X		
9200M15G03	Tube assy mid oil	G.E.	72-09-03	X	X		
9200M16G02	Tube assy mid oil	G.E.	72-09-03	X	X		
9200M17G01	Y shaped fuel manifold assy	G.E.	72-09-03	X	X		
9200M17G02	Y shaped fuel manifold assy	G.E.	72-09-03	X	X		
9200M17G03	Y shaped fuel manifold assy	G.E.	72-09-03	X	X		
9200M17G06	Y shaped fuel manifold assy	G.E.	72-09-03	X	X		
9200M46P01	Tube assy XFR GRBX oil	G.E.	72-09-03	X	X		
9200M46P04	Tube assy XFR GRBX oil	G.E.	72-09-03	X	X		
9200M82G01	Tube oil C scavenge	G.E.	72-09-03	X	X		
9200M84G01	Tube assy B sump oil	G.E.	72-09-03	X	X		
9200M97G01	Tube oil-let S	G.E.	72-09-03	X	X		
9210M11G01	Tube assy – seal drain	G.E.	72-09-03	X	X		
9210M13G01	Tube drain-B sump	G.E.	72-09-03	X	X		
9210M17G01	Manifold air stage 7th	G.E.	72-09-03	X	X		
9210M17G02	Manifold air stage 7th	G.E.	72-09-03	X	X		
9211M89G01	Tube assy scavenge	G.E.	72-09-03	X	X		
9229M19G01	Tube anti-ice	G.E.	72-09-03	X	X		
9229M20G01	Tube anti-ice	G.E.	72-09-03	X	X		
9229M61G01	Tube anti icing	G.E.	72-09-03	X	X		
9246M50G01	Manifold assy shrouded fuel (LH)	G.E.	72-09-03	X	X		
9246M50G02	Manifold assy shrouded fuel (LH)	G.E.	72-09-03	X	X		
9246M50G03	Manifold assy shrouded fuel (RH)	G.E.	72-09-03	X	X		
9246M50G04	Manifold assy shrouded fuel (RH)	G.E.	72-09-03	X	X		
9254M52G01	Tube anti icing	G.E.	72-09-03	X	X		
9254M53G01	Tube anti icing	G.E.	72-09-03	X	X		
9256M48G01	Tube air cooling LPT	G.E.	72-09-03	X	X		
9293M79P01	Insulation blanket	G.E.	72-09-03	X	X		
9293M79P07	Insulation blanket	G.E.	72-09-03	X	X		
9303M33G01	Manifold assy CDP	G.E.	72-09-03	X	X		
9355M92G01	Tube drain	G.E.	72-09-03	X	X		
9360M14G01	Tube drain	G.E.	72-09-03	X	X		
9362M65G01	Center vent. air TMF	G.E.	72-24-02	X	X		
9644M43P04	Insulation blanket	G.E.	72-09-03	X	X		
9644M43P07	Insulation blanket	G.E.	72-09-03	X	X		

4.1.3- CF6-50 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
9644M44P01	Insulation blanket	G.E.	72-09-03	X	X		
9644M44P02	Insulation blanket	G.E.	72-09-03	X	X		
9652M72G02	Tube assy vent inner	G.E.	72-09-03	X	X		
9652M72G03	Tube assy vent inner	G.E.	72-09-03	X	X		
9652M74G02	Tube assy inner scavenge	G.E.	72-09-03	X	X		
9673M66G07	Lever assy actuation	G.E.	72-32-11	X	X		
9673M66G08	Lever assy actuation	G.E.	72-32-11	X	X		
9673M66G09	Lever assy actuation	G.E.	72-32-11	X	X		
9673M66G10	Lever assy actuation	G.E.	72-32-11	X	X		
9673M66G13	Lever assy actuation	G.E.	72-32-11	X	X		
9699M69G01	Horizontal drive shaft housing	G.E.	72-09-03	X	X		
BACH7F0243FF	Hose assy	G.E.	72-09-03	X	X		

4.1.4- CFM 56 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
108280-167	Hose assy FWD (Anti-ice)	CFMI	72-09-03	X	X		
1324M17G01	Tube air LPT cooling	CFMI	72-09-03	X	X		
1324M17G02	Tube air LPT cooling	CFMI	72-09-03	X	X		
1324M17G03	Tube air LPT cooling	CFMI	72-09-03	X	X		
1324M19G01	Tube air LPT cooling	CFMI	72-09-03	X	X		
1324M19G02	Tube air LPT cooling	CFMI	72-09-03	X	X		
1324M19G03	Tube air LPT cooling	CFMI	72-09-03	X	X		
1324M21G01	Tube air	CFMI	72-09-03	X	X		
1324M21G02	Tube air	CFMI	72-09-03	X	X		
1324M21G03	Tube air	CFMI	72-09-03	X	X		
1324M38G01	Bracket - VSV	CFMI	72-09-04	X	X	X	
1324M38G01	BRACKET-VSV	CFMI	72-09-04	X	X	X	
1324M82G01	Tube air	CFMI	72-09-03	X	X		
1324M91G01	Tube drain VSV rod upper	CFMI	72-09-03	X	X		
1348M28G01	Hose air	CFMI	72-09-03	X	X		
1348M28G02	Hose air	CFMI	72-09-03	X	X		
1348M38P001A	Bracket - T3 Sensor FWD	CFMI	72-09-04	X	X	X	
1348M38P001A	BRACKET-T3 SENSOR PAID	CFMI	72-09-04	X	X	X	
1348M59P01	Bracket	CFMI	72-09-04	X	X	X	
1348M59P01	BRACKET	CFMI	72-09-04	X	X	X	
1348M88G02	Manifold fuel supply	CFMI	72-09-03	X	X		
1348M88G05	Manifold fuel supply	CFMI	72-09-03	X	X		
1348M88G07	Manifold fuel supply	CFMI	72-09-03	X	X		
1348M88G08	Manifold fuel supply	CFMI	72-09-03	X	X		
1348M90G05	Manifold fuel outer	CFMI	72-09-03	X	X		
1348M90G06	Manifold fuel outer	CFMI	72-09-03	X	X		
1348M91G05	Manifold fuel inner	CFMI	72-09-03	X	X		
1348M91G08	Manifold fuel inner	CFMI	72-09-03	X	X		
1360M70G01	Inlet gearbox	CFMI	72-61-01	X	X		
1443M11G01	Tube Air Start Blind Inlet	CFMI	72-09-03	X	X		
1443M64G02	Manifold fuel supply drain	CFMI	72-09-03	X	X		
1443M64G03	Manifold fuel supply drain	CFMI	72-09-03	X	X		
1443M66G01	Tube fuel drain	CFMI	72-09-03	X	X		
1443M72G01	Tube air signal	CFMI	72-09-03	X	X		
1443M72G02	Tube air signal	CFMI	72-09-03	X	X		
1443M82P01	Tube Air Start Blind Inlet	CFMI	72-09-03	X	X		
1444M22G01	Tube Fuel Supply	CFMI	72-09-03	X	X		

4.1.4- CFM 56 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
1444M22G02	Tube Fuel Supply	CFMI	72-09-03	X	X		
1444M28G01	Tube fuel drain	CFMI	72-09-03	X	X		
1444M33G01	Tube fuel drain	CFMI	72-09-03	X	X		
1444M44G02	Tube air racc. upper	CFMI	72-09-03	X	X		
1444M50G02	Manifold fuel	CFMI	72-09-03	X	X		
1444M50G05	Manifold fuel outer	CFMI	72-41-04	X	X		
1444M50G06	Manifold fuel	CFMI	72-09-03	X	X		
1444M50G08	Manifold fuel	CFMI	72-09-03	X	X		
1444M50G11	Manifold fuel outer	CFMI	72-41-04	X	X		
1444M50G12	Manifold fuel outer	CFMI	72-09-03	X	X		
1444M51G02	Manifold fuel inner	CFMI	72-09-03	X	X		
1444M51G06	Manifold fuel inner	CFMI	72-09-03	X	X		
1444M51G08	Manifold fuel inner	CFMI	72-09-03	X	X		
1444M51G11	Manifold fuel inner	CFMI	72-09-03	X	X		
1444M51G12	Manifold fuel inner	CFMI	72-09-03	X	X		
1444M51G17	Manifold fuel inner	CFMI	72-09-03	X	X		
1444M51G18	Manifold fuel inner	CFMI	72-09-03	X	X		
1444M54G01	Tube air	CFMI	72-09-03	X	X		
1444M56G02	Tube air LPT cooling	CFMI	72-09-03	X	X		
1444M56G04	Tube air LPT cooling	CFMI	72-09-03	X	X		
1444M56G05	Tube air LPT cooling	CFMI	72-09-03	X	X		
1466M73G01	Tube air LPT cooling	CFMI	72-09-04	X	X		
1466M74G01	Tube air LPT cooling	CFMI	72-09-04	X	X		
1466M77G01	Tube air LPT cooling	CFMI	72-09-04	X	X		
1466M88G01	Tube air LPT cooling	CFMI	72-09-04	X	X		
1467M12G01	Manifold drain VSV	CFMI	72-09-03	X	X		
1467M24G01	Manifold fuel drain VSV	CFMI	72-09-03	X	X		
1467M39G01	Tube fuel drain	CFMI	72-09-03	X	X		
1467M41G01	Manifold fuel TCC	CFMI	72-09-03	X	X		
1467M41G02	Manifold fuel TCC	CFMI	72-09-03	X	X		
1467M43G01	Tube fuel drain	CFMI	72-09-03	X	X		
1467M96G01	Bracket - ignition	CFMI	72-09-04	X	X	X	
1467M96G01	BRACKET-IGNITION	CFMI	72-09-04	X	X	X	
1527M24G01	Manifold fuel drain VSV	CFMI	72-09-03	X	X		
1527M26G01	Tube air LPT cooling	CFMI	72-09-03	X	X		
1527M67G01	Manifold fuel	CFMI	72-09-03	X	X		
1527M67G02	Manifold fuel	CFMI	72-09-03	X	X		

4.1.4- CFM 56 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
1527M69G01	Tube fuel	CFMI	72-09-03	X	X		
1527M69G02	Tube fuel	CFMI	72-09-03	X	X		
1527M71G01	BRACKET-PC	CFMI	72-09-04	X	X	X	
1527M77G02	Manifold fuel	CFMI	72-09-03	X	X		
1527M77G04	Manifold fuel	CFMI	72-09-03	X	X		
1527M91G01	Manifold fuel TCC	CFMI	72-09-03	X	X		
1605M50G01	BRACKET-LPT AFT	CFMI	72-09-04	X	X	X	
1605M51G01	BRACKET-LPT AFT	CFMI	72-09-04	X	X	X	
1605M63G01	Tube air HPT	CFMI	72-09-03	X	X		
1605M65G01	Fuel Drain Tube	CFMI	72-09-03	X	X	X	
1605M68P001A	BRACKET SUPPORT	CFMI	72-09-04	X	X	X	
1605M78G03	Tube air	CFMI	72-09-03	X	X		
1605M80G01	BRACKET	CFMI	72-09-04	X	X	X	
1605M94G01	Tube air	CFMI	72-09-03	X	X		
1616M93G01	Tube air LPT cooling	CFMI	72-09-03	X	X		
1616M94G01	Tube air LPT cooling	CFMI	72-09-03	X	X		
1616M95G01	Tube air LPT cooling	CFMI	72-09-03	X	X		
1621M30P03	Insulation blanket	CFMI	72-09-03	X	X		
1621M30P04	Insulation blanket	CFMI	72-09-03	X	X		
1621M30P05	Insulation blanket	CFMI	72-09-03	X	X		
1621M30P06	Insulation blanket	CFMI	72-09-03	X	X		
1621M30P07	Insulation blanket	CFMI	72-09-03	X	X		
1621M30P08	Insulation blanket	CFMI	72-09-03	X	X		
1621M30P09	Insulation blanket	CFMI	72-09-03	X	X		
1621M30P10	Insulation blanket	CFMI	72-09-03	X	X		
1621M30P13	Insulation blanket	CFMI	72-09-03	X	X		
1621M30P14	Insulation blanket	CFMI	72-09-03	X	X		
1621M30P15	Insulation blanket	CFMI	72-09-03	X	X		
1621M30P16	Insulation blanket	CFMI	72-09-03	X	X		
1621M30P17	Insulation blanket	CFMI	72-09-03	X	X		
1621M30P18	Insulation blanket	CFMI	72-09-03	X	X		
1621M30P19	Insulation blanket	CFMI	72-09-03	X	X		
1621M30P20	Insulation blanket	CFMI	72-09-03	X	X		
1621M30P21	Insulation blanket	CFMI	72-09-03	X	X		
1621M30P22	Insulation blanket	CFMI	72-09-03	X	X		
1621M30P23	Insulation blanket	CFMI	72-09-03	X	X		
1621M30P24	Insulation blanket	CFMI	72-09-03	X	X		

4.1.4- CFM 56 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
1621M35G01	Bracket - support manifold	CFMI	72-09-04	X	X	X	
1621M35G01	BRACKET-SUPPORT MANIFOLD	CFMI	72-09-04	X	X	X	
1621M42P01	Insulation blanket	CFMI	72-09-03	X	X		
1621M42P02	Insulation blanket	CFMI	72-09-04	X	X	X	
1621M42P03	Insulation blanket	CFMI	72-09-03	X	X		
1621M42P04	Insulation blanket	CFMI	72-09-03	X	X		
1621M42P05	Insulation blanket	CFMI	72-09-03	X	X		
1621M42P06	Insulation blanket	CFMI	72-09-04	X	X	X	
1621M42P07	Insulation blanket	CFMI	72-09-03	X	X		
1621M42P08	Insulation blanket	CFMI	72-09-03	X	X		
1621M42P09	Insulation blanket	CFMI	72-09-04	X	X	X	
1621M42P10	Insulation blanket	CFMI	72-09-04	X	X	X	
1621M42P11	Insulation blanket	CFMI	72-09-04	X	X	X	
1621M42P12	Insulation blanket	CFMI	72-09-04	X	X	X	
1621M50G01	Manifold fuel drain	CFMI	72-09-03	X	X		
1621M52P001A	Bracket - drain tube	CFMI	72-09-04	X	X	X	
1621M82G01	Fuel Drain Tube	CFMI	72-09-03	X	X	X	
1621M90G01	Tube air	CFMI	72-09-03	X	X		
1645M11G01	Tube air start bleed	CFMI	72-09-03	X	X		
1645M19G01	Tube air 5th STG lower	CFMI	72-09-03	X	X		
1645M23P001A	BRACKET-SUPPORT	CFMI	72-09-04	X	X	X	
1645M25G03	Pipe air	CFMI	72-09-03	X	X		
1645M28G05	BRACKET-MANIFOLD HPT	CFMI	72-09-04	X	X	X	
1645M31G03	Tube air MPT 9th STG	CFMI	72-09-03	X	X		
1645M36G03	BRACKET-LPT AFT	CFMI	72-09-04	X	X	X	
1677M12G02	Manifold fuel	CFMI	72-09-03	X	X		
1677M18G01	Manifold-air start bleed 5th stg	CFMI	72-09-03	X	X		
1677M18G02	Manifold-air start bleed 5th stg	CFMI	72-09-03	X	X		
1677M20G01	Tube air 5th STG upper	CFMI	72-09-03	X	X		
1677M28G01	BRACKET-FUEL SUPPLY	CFMI	72-09-04	X	X	X	
1677M30003	BRACKET-SUPPORT	CFMI	72-09-04	X	X	X	
1677M30G03	Bracket - support	CFMI	72-09-04	X	X	X	
1677M31G01	BRACKET-SUPPORT START BLEED	CFMI	72-09-04	X	X	X	
1677M33G01	Fuel Drain Manifold	CFMI	72-09-03	X	X	X	
1677M48G01	Bracket - support	CFMI	72-09-04	X	X	X	
1677M48G01	BRACKET-SUPPORT	CFMI	72-09-04	X	X	X	
1677M49G01	BRACKET-SUPPORT	CFMI	72-09-04	X	X	X	

4.1.4- CFM 56 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
1677M55G01	Manifold fuel distribution	CFMI	72-09-03	X	X		
1677M61G01	Manifold fuel TCC	CFMI	72-09-03	X	X		
1677M73G01	Tube fuel drain RCC valve	CFMI	72-09-03	X	X	X	
1677M75G01	BRACKET-SUPPORT	CFMI	72-09-04	X	X	X	
1677M76G01	BRACKET-AIR TUBE	CFMI	72-09-04	X	X	X	
1677M83G01	Tube air	CFMI	72-09-03	X	X		
1677M85G01	Tube air LPT	CFMI	72-09-03	X	X		
1677M87G01	Tube air LPT Cooling	CFMI	72-09-03	X	X		
1677M89G01	Tube air LPT	CFMI	72-09-03	X	X		
1677M91G01	Tube start bleed discharge	CFMI	72-09-03	X	X		
1677M98G01	Bracket - actuator drain VSV	CFMI	72-09-04	X	X	X	
1677M98G01	BRACKET-ACTUATOR DRAIN VSV	CFMI	72-09-04	X	X	X	
1677M99P001A	Bracket - fuel distribution	CFMI	72-09-04	X	X	X	
1677M99P001A	BRACKET-FUEL DISTRIBUTION	CFMI	72-09-04	X	X	X	
1716M10G01	Manifold fuel drain	CFMI	72-09-03	X	X	X	
1716M40G01	Manifold fuel drain	CFMI	72-09-03	X	X		
1716M41G01	BRACKET-WIRING	CFMI	72-09-04	X	X	X	
1716M42G01	BRACKET-WIRING	CFMI	72-09-04	X	X	X	
1716M43G01	BRACKET-WIRING	CFMI	72-09-04	X	X	X	
1716M44G01	BRACKET-WIRING	CFMI	72-09-04	X	X	X	
1716M47G01	BRACKET-WIRING	CFMI	72-09-04	X	X	X	
1716M48G01	BRACKET-WIRING	CFMI	72-09-04	X	X	X	
1716M49G01	BRACKET-TUBE START BLEED	CFMI	72-09-04	X	X	X	
1716M97G01	BRACKET-WIRING	CFMI	72-09-04	X	X	X	
1787M42G02	Tube air 5th STG upper	CFMI	72-09-03	X	X		
1788M28P001A	Bracket - support	CFMI	72-09-04	X	X	X	
1788M89G01	Bracket - support	CFMI	72-09-04	X	X	X	
1813M14G01	Bracket - assy pneumatic system sense	CFMI	72-09-04	X	X	X	
1813M15G01	Bracket - support electrical cable	CFMI	72-09-04	X	X	X	
1813M78P01	Bracket - support HPT manifold	CFMI	72-09-04	X	X	X	
1817M10G01	BRACKET-SUPPORT RACC VALVE	CFMI	72-09-04	X	X	X	
1817M21G01	Tube air signal	CFMI	72-09-03	X	X		
1817M21G02	Tube air signal	CFMI	72-09-03	X	X		
1817M35G01	Tube assy	CFMI	72-09-03	X	X		
1817M37P001A	BRACKET-ASSY	CFMI	72-09-04	X	X	X	
1817M38G01	Tube fuel drain RCC valve	CFMI	72-09-03	X	X	X	
1817M45G01	Bracket - manifold fuel	CFMI	72-09-04	X	X	X	

4.1.4- CFM 56 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
1817M45G01	BRACKET-MANIFOLD FUEL	CFMI	72-09-04	X	X	X	
1817M66G01	Drain MFC seal	CFMI	72-09-03	X	X		
1867M15G01	Manifold fuel inner	CFMI	72-41-04	X	X		
1867M17G01	Manifold fuel outer	CFMI	72-41-04	X	X		
1867M18G01	Manifold fuel outer	CFMI	72-41-04	X	X		
1867M19G01	Bracket - valve HPT	CFMI	72-09-04	X	X	X	
1867M19G01	BRACKET-VALVE HPT	CFMI	72-09-04	X	X	X	
1867M34G01	Bracket - SPRT PS3	CFMI	72-09-04	X	X	X	
1868M24G01	Manifold fuel supply drain	CFMI	72-09-03	X	X		
1869M13G01	BRACKET-ASSY	CFMI	72-09-04	X	X	X	
1869M14G01	Bracket - support	CFMI	72-09-04	X	X	X	
1869M32G01	Bracket - support	CFMI	72-09-04	X	X	X	
1871M32G03	Bracket - support LPT	CFMI	72-09-04	X	X	X	
1871M48G03	Bracket - extension	CFMI	72-09-04	X	X	X	
1871M49G05	Bracket - support fuel manifold	CFMI	72-09-04	X	X	X	
1871M72G01	Bracket - support sensor line	CFMI	72-09-04	X	X	X	
1871M73G03	Bracket - manifold HPT	CFMI	72-09-04	X	X	X	
1882M60G04	Manifold fuel inner	CFMI	72-41-04	X	X		
1882M62G04	Manifold fuel outer	CFMI	72-41-04	X	X		
1882M63G04	Manifold fuel outer	CFMI	72-41-04	X	X		
1888M49G01	Tube air LPT cooling	CFMI	72-09-03	X	X		
1888M50G01	Tube air	CFMI	72-09-03	X	X		
1888M51G01	Tube air LPT cooling	CFMI	72-09-03	X	X		
1888M52G01	Tube air LPT cooling	CFMI	72-09-03	X	X		
1892M13G01	TBV Fuel Tube Drain	CFMI	72-09-03	X	X	X	
1892M21G01	Bracket - TBV	CFMI	72-09-04	X	X	X	
1892M23P001A	Bracket - VSV manifold	CFMI	72-09-04	X	X	X	
1892M42G01	Bracket - SRPT PS3	CFMI	72-09-04	X	X	X	
1892M43G01	Bracket - Support PS3	CFMI	72-09-04	X	X	X	
1892M46G01	Bracket - Support LPT	CFMI	72-09-04	X	X	X	
1892M47G01	Tube air LPT cooling	CFMI	72-09-03	X	X		
1892M52P001A	Bracket - Support electrical cable	CFMI	72-09-04	X	X	X	
1892M54G01	Bracket - LPT AFT	CFMI	72-09-04	X	X	X	
1892M59G01	Bracket - manifold air TCC	CFMI	72-09-04	X	X	X	
1892M61G01	Manifold fuel transient bleed valve	CFMI	72-09-03	X	X		
1892M62G01	Tube air signal PS3	CFMI	72-09-03	X	X		
1892M81G01	Bracket - transient bleed tube	CFMI	72-09-04	X	X	X	

4.1.4- CFM 56 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
1892M82G01	Bracket - LPT AFT	CFMI	72-09-04	X	X	X	
1892M84G01	Bracket - LPT AFT	CFMI	72-09-04	X	X	X	
1892M97G01	Bracket - LPT AFT	CFMI	72-09-04	X	X	X	
1895M12G01	Manifold fuel inner	CFMI	72-41-04	X	X		
1895M12G02	Manifold fuel inner	CFMI	72-41-04	X	X		
1895M16G01	Bracket - tube LPT	CFMI	72-09-04	X	X	X	
1895M17G01	Bracket - transient bleed valve	CFMI	72-09-04	X	X	X	
1895M18G01	Tube air LPT cooling	CFMI	72-09-03	X	X		
1895M18G02	Tube air LPT cooling	CFMI	72-09-03	X	X		
1895M18G03	Tube air LPT cooling	CFMI	72-09-03	X	X		
1895M18G09	Tube air LPT cooling	CFMI	72-09-03	X	X		
1895M18G10	Tube air LPT cooling	CFMI	72-09-03	X	X		
1895M18G14	Tube air LPT cooling	CFMI	72-09-03	X	X		
1895M18G16	Tube air LPT cooling	CFMI	72-09-03	X	X		
1895M18G22	Manifold Air HPT Clearance Control	CFMI	72-09-03	X	X		
1895M18G23	Tube air LPT cooling	CFMI	72-09-03	X	X		
1895M59G01	Bracket - support cable	CFMI	72-09-04	X	X	X	
1895M80G03	Manifold fuel outer	CFMI	72-09-03	X	X		
1895M80G06	Manifold fuel outer	CFMI	72-09-03	X	X		
1895M80G08	Manifold fuel outer	CFMI	72-09-03	X	X		
1895M81G03	Manifold fuel inner	CFMI	72-41-04	X	X		
1895M81G06	Manifold fuel inner	CFMI	72-09-03	X	X		
1895M81G11	Manifold fuel inner	CFMI	72-09-03	X	X		
1895M82G03	Manifold fuel outer	CFMI	72-09-03	X	X		
1895M82G06	Manifold fuel outer	CFMI	72-09-03	X	X		
1895M82G08	Manifold fuel outer	CFMI	72-09-03	X	X		
1895M83G03	Manifold fuel inner	CFMI	72-41-04	X	X		
1895M83G06	Manifold fuel inner	CFMI	72-09-03	X	X		
1895M83G09	Manifold fuel inner	CFMI	72-09-03	X	X		
1895M83G14	Manifold fuel inner	CFMI	72-09-03	X	X		
1895M96G01	Tube air 5th stage	CFMI	72-09-03	X	X		
1897M55P001A	Bracket - support	CFMI	72-09-04	X	X	X	
1897M55P001A	BRACKET-ASSY	CFMI	72-09-04	X	X	X	
1897M70G01	Bracket - SPRT	CFMI	72-09-04	X	X	X	
1971M11G01	Bracket - fuel	CFMI	72-09-04	X	X	X	
1971M12G01	Bracket - fuel	CFMI	72-09-04	X	X	X	
1971M14P01	Bracket - fuel	CFMI	72-09-04	X	X	X	

4.1.4- CFM 56 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
1971M17G01	Manifold Fuel Right Side	CFMI	72-09-03	X	X		
1971M18G01	Manifold Fuel Left Side	CFMI	72-41-04	X	X		
1971M55G01	LPTACC Drain Tube	CFMI	72-09-03	X	X	X	
1971M86G01	Bracket	CFMI	72-09-04	X	X	X	
1971M95G01	Manifold-Fuel Outer	CFMI	72-41-04	X	X		
1971M96G01	Manifold-Fuel Outer	CFMI	72-41-04	X	X		
1971M98G01	Bracket	CFMI	72-09-04	X	X	X	
2046M34G01	Bracket	CFMI	72-09-04	X	X	X	
2046M41G01	VSV Manifold Drain	CFMI	72-09-03	X	X	X	
2046M62G01	Manifold-Fuel Inner	CFMI	SB 73-0128 Rev4	X	X		
2046M63G01	Manifold-Fuel Outer	CFMI	72-41-04	X	X		
2046M73G01	Bracket - LPT	CFMI	72-09-04	X	X	X	
2175M48G01	Manifold Fuel Head End Var STTR	CFMI	72-09-03	X	X		
2283M22G01	VSV Fuel Manifold Drain	CFMI	72-09-03	X	X	X	
2283M23G01	VSV Drain Manifold	CFMI	72-09-03	X	X	X	
2283M26G01	VSV Drain Manifold	CFMI	72-09-03	X	X	X	
2283M38G01	Manifold drain VSV	CFMI	72-09-03	X	X	X	
2283M69G01	Manifold fuel drain VSV	CFMI	72-09-03	X	X	X	
238-0502-501	Elbow assy mid stage	CFMI	72-09-03	X	X		
238-0502-503	Elbow assy mid stage	CFMI	72-09-03	X	X		
238-0503-503	Tee assy	CFMI	72-09-03	X	X		
238-0508-501	Duct pneumatic	CFMI	72-09-03	X	X		
238-0508-503	Duct Assy	CFMI	72-09-03	X	X		
238-0510-501	Duct assy lwr HP	CFMI	72-09-03	X	X		
238-0511-501	Duct pneumatic	CFMI	72-09-03	X	X		
238-0602-501	Duct Assy	CFMI	71-00-17	X	X		
238-0658-501	Duct pneumatic	CFMI	72-09-03	X	X		
238D0551-501	Duct assy	CFMI	72-09-03	X	X		
238D0551-507	Duct assy	CFMI	72-09-03	X	X		
238D0551-509	Hose	CFMI	72-09-03	X	X		
238D0551-513	Tube	CFMI	72-09-03	X	X		
238D0551-515	Tube	CFMI	72-09-03	X	X		
2409M00G01	Tube fuel drain TBV	CFMI	72-09-03	X	X	X	
301-585-405-0	Tube fuel drain	CFMI	72-09-03	X	X		
301-585-406-0	Tube fuel drain	CFMI	72-09-03	X	X		
301-585-805-0	Tube fuel	CFMI	72-09-03	X	X		
301-585-806-0	Tube fuel	CFMI	72-09-03	X	X		

4.1.4- CFM 56 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
335-254-803-0	Hose oil aft sump scavenge	CFMI	72-09-03	X	X		
335-266-605-0	Main Scavenge Filter Servo Fuel Heater Oil Tub	CFMI	72-09-03	X	X		
336-021-601	Bracket	CFMI	72-09-04	X	X	X	
336-024-601	Bracket	CFMI	72-09-04	X	X	X	
336-065-402-0	Manifold air	CFMI	72-09-03	X	X		
336-065-403-0	Manifold air	CFMI	72-09-03	X	X		
336-066-402-0	Manifold air CLG Upper	CFMI	72-54-11	X	X		
336-066-403-0	Manifold air CLG Upper	CFMI	72-54-11	X	X		
336-066-502-0	Manifold air CLG Lower	CFMI	72-54-11	X	X		
336-066-503-0	Manifold air CLG Lower	CFMI	72-54-11	X	X		
336-152-904-0	Tube oil	CFMI	72-09-03	X	X		
336-403-201-0	Bracket	CFMI	72-09-04	X	X	X	
336-450-605-0	Tube fuel inlet exchanger IDG	CFMI	72-09-03	X	X		
336-450-805-0	Tube fuel outlet exchanger IDG	CFMI	72-09-03	X	X		
336-450-807-0	Tube fuel outlet exchanger IDG	CFMI	72-09-03	X	X		
336-452-807-0	Hose RTN heater	CFMI	72-09-03	X	X		
336-460-007-0	Hose fuel	CFMI	72-09-03	X	X		
336-460-008-0	Hose fuel	CFMI	72-09-03	X	X		
336-460-051-0	Hose fuel	CFMI	72-09-03	X	X		
336-460-052-0	Hose fuel	CFMI	72-09-03	X	X		
336-460-071-0	Hose fuel	CFMI	72-09-03	X	X		
336-460-106-0	Hose oil	CFMI	72-09-03	X	X		
336-460-205-0	Hose fuel	CFMI	72-09-03	X	X		
336-460-302-0	Hose stage fuel	CFMI	72-09-03	X	X		
336-460-402-0	Hose fuel sov	CFMI	72-09-03	X	X		
336-460-603-0	Hose-VSV Head	CFMI	72-09-03	X	X		
336-460-803-0	Hose PCR fuel	CFMI	72-09-03	X	X		
336-461-501-0	Hose RTN fuel OIL HT EXCH	CFMI	72-09-03	X	X		
336-462-002-0	Hose - OIL scavenge TGB	CFMI	72-09-03	X	X		
336-462-051-0	Hose - OIL scavenge TGB	CFMI	72-09-03	X	X		
336-462-071-0	Hose - OIL scavenge TGB	CFMI	72-09-03	X	X		
336-462-304-0	Hose fuel	CFMI	72-09-03	X	X		
336-462-603-0	Hose LPT fuel	CFMI	72-09-03	X	X		
336-463-405-0	Tube Fuel Drain VBV	CFMI	72-09-03	X	X		
336-463-406-0	Tube Fuel Drain VBV	CFMI	72-09-03	X	X		
336-468-206-0	Tube Oil Supply Rear Sump	CFMI	72-09-03	X	X		
336-468-605-0	Tube Oil Scavenge Rear Sump	CFMI	72-09-03	X	X		

4.1.4- CFM 56 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
336-469-910-0	Tube bundle junction box assy	CFMI	72-23-21	X	X		
336-469-912-0	Tube bundle junction box assy	CFMI	72-23-21	X	X		
336-504-604-0	Low Pressure Turbine Air Supply Tube	CFMI	72-54-18	X	X	X	
336-512-403-0	Tube oil	CFMI	72-09-03	X	X		
336-512-601-0	Tube oil	CFMI	72-09-03	X	X		
336-512-602-0	Tube oil	CFMI	72-09-03	X	X		
336-512-603-0	Tube oil scavenge rear sump	CFMI	72-09-03	X	X		
336-513-603-0	Bracket	CFMI	72-09-04	X	X	X	
336-523-002-0	Bracket	CFMI	72-09-04	X	X	X	
336-543-001-0	Tube fuel drain	CFMI	72-09-03	X	X		
336-543-002-0	Tube fuel drain	CFMI	72-09-03	X	X		
337-026-801-0	Tube fuel-open vbv	CFMI	72-09-03	X	X		
337-026-804-0	Tube fuel-open vbv	CFMI	72-09-03	X	X		
337-027-201-0	Tube Close VBV	CFMI	72-09-03	X	X		
337-027-203-0	Tube Close VBV	CFMI	72-09-03	X	X		
337-030-303-0	Tube oil supply rear sump	CFMI	72-09-03	X	X		
337-030-304-0	Tube oil supply rear sump	CFMI	72-09-03	X	X		
337-033-502-0	Manifold fuel LPTCC	CFMI	72-09-03	X	X		
337-033-702-0	Tube air PS3	CFMI	72-09-03	X	X		
337-033-704-0	Tube air PS3	CFMI	72-09-03	X	X		
337-039-310-0	Tube bundle junction box assy	CFMI	72-23-21	X	X		
337-039-311-0	Tube bundle junction box assy	CFMI	72-23-21	X	X		
337-039-312-0	Tube bundle junction box assy	CFMI	72-23-21	X	X		
337-039-313-0	Tube bundle junction box assy	CFMI	72-23-21	X	X		
337-039-314-0	Tube bundle junction box assy	CFMI	72-23-21	X	X		
337-039-315-0	Tube bundle junction box assy	CFMI	72-23-21	X	X		
337-039-316-0	Tube bundle junction box assy	CFMI	72-23-21	X	X		
337-044-203-0	Tube assy-LPTACC	CFMI	72-09-03	X	X		
337-052-409-0	BRACKET	CFMI	72-09-04	X	X	X	
337-052-802-0	BRACKET-ASSY	CFMI	72-09-04	X	X	X	
337-058-603-0	BRACKET-ASSY	CFMI	72-09-04	X	X	X	
337-060-202-0	BRACKET-ASSY	CFMI	72-09-04	X	X	X	
337-064-104-0	BRACKET-ASSY	CFMI	72-09-04	X	X	X	
337-064-905-0	BRACKET-ASSY	CFMI	72-09-04	X	X	X	
337-065-002-0	BRACKET-ASSY	CFMI	72-09-04	X	X	X	
337-066-902-0	BRACKET-ASSY	CFMI	72-09-04	X	X	X	
337-067-004-0	BRACKET	CFMI	72-09-04	X	X	X	

4.1.4- CFM 56 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
337-067-809-0	BRACKET-ASSY	CFMI	72-09-04	X	X	X	
337-068-401-0	BRACKET ASSY	CFMI	72-09-04	X	X	X	
337-099-007-0	Manifold Assy CLG	CFMI	72-54-11	X	X		
337-099-008-0	Manifold Assy CLG Upper	CFMI	72-54-11	X	X		
337-099-009-0	Manifold Assy CLG Upper	CFMI	72-54-11	X	X		
337-099-010-0	Manifold Assy CLG Upper	CFMI	72-54-11	X	X		
337-099-107-0	Manifold Assy CLG Lower	CFMI	72-54-11	X	X		
337-099-108-0	Manifold Assy CLG Lower	CFMI	72-54-11	X	X		
337-099-109-0	Manifold Assy CLG Lower	CFMI	72-54-11	X	X		
337-099-110-0	Manifold Assy CLG Lower	CFMI	72-54-11	X	X		
337-110-303-0	Manifold Air	CFMI	72-54-18	X	X		
337-110-305-0	Manifold Air	CFMI	72-54-18	X	X		
337-114-052-0	Tube scavenge oil	CFMI	72-09-03	X	X		
337-130-503-0	BRACKET-ASSY	CFMI	72-09-04	X	X	X	
337-130-803-0	BRACKET-SUPPORT	CFMI	72-09-04	X	X	X	
337-138-604-0	BRACKET-SUPPORT	CFMI	72-09-04	X	X	X	
337-152-903-0	Tube oil	CFMI	72-09-03	X	X		
337-152-904-0	Tube oil scavenge rear sump	CFMI	72-09-03	X	X		
337-152-905-0	Tube oil scavenge rear sump	CFMI	72-09-03	X	X		
337-153-101-0	Tube fuel drain	CFMI	72-09-03	X	X		
337-154-101-0	Tube fuel drain	CFMI	72-09-03	X	X		
337-180-701-0	BRACKET-VSV MANIFOLD	CFMI	72-09-04	X	X	X	
338-014-504-0	Bracket assy	CFMI	72-09-04	X	X	X	
338-014-601	Bracket	CFMI	72-09-04	X	X	X	
338-014-601-0	Bracket assy	CFMI	72-09-04	X	X	X	
338-017-301-0	Bracket assy	CFMI	72-09-04	X	X	X	
338-017-502-0	Bracket assy	CFMI	72-09-04	X	X	X	
338-018-302-0	Bracket - support	CFMI	72-09-04	X	X	X	
338-020-603	Bracket	CFMI	72-09-04	X	X	X	
338-020-703-0	Tube Bundle Junction Box	CFMI	72-23-21	X	X		
338-020-704-0	Tube bundle junction box assy	CFMI	72-23-21	X	X		
338-020-705-0	Tube bundle junction box assy	CFMI	72-23-21	X	X	X	
338-020-706-0	Tube bundle junction box assy	CFMI	72-23-21	X	X	X	
338-020-707-0	Tube bundle junction box assy	CFMI	72-23-21	X	X	X	
338-021-007-0	Bracket assy	CFMI	72-09-04	X	X	X	
338-021-402-0	Bracket	CFMI	72-09-04	X	X	X	
338-021-605-0	Bracket	CFMI	72-09-04	X	X	X	

4.1.4- CFM 56 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
338-021-702	Bracket	CFMI	72-09-04	X	X	X	
338-021-804-0	Bracket	CFMI	72-09-04	X	X	X	
338-022-101-0	Bracket assy	CFMI	72-09-04	X	X	X	
338-023-003-0	Bracket assy	CFMI	72-09-04	X	X	X	
338-023-203-0	Bracket assy	CFMI	72-09-04	X	X	X	
338-024-405	Bracket	CFMI	72-09-04	X	X	X	
338-024-802-0	Bracket assy	CFMI	72-09-04	X	X	X	
338-027-801-0	Bracket assy	CFMI	72-09-04	X	X	X	
338-054-001-0	Bracket assy	CFMI	72-09-04	X	X	X	
338-055-202-0	Bracket assy	CFMI	72-09-04	X	X	X	
338-055-401-0	Bracket assy	CFMI	72-09-04	X	X	X	
338-118-602-0	Manifold Air	CFMI	72-54-18	X	X		
338-122-903-0	Bracket assy	CFMI	72-09-04	X	X	X	
338-128-501-0	Hose Fuel Inlet Exchanger IDG	CFMI	72-09-03	X	X		
340-027-506-0	Manifold-CLG	CFMI	72-54-11	X	X		
340-027-507-0	Manifold-CLG	CFMI	72-54-11	X	X		
340-027-555-0	Manifold CLG lower	CFMI	72-54-11	X	X		
340-027-556-0	Manifold CLG	CFMI	72-54-11	X	X		
340-027-557-0	Manifold-CLG	CFMI	72-54-11	X	X		
340-5108-505	Strut Sidewall	CFMI	78-11-11	X	X		
340-5108-507	Strut Sidewall	CFMI	78-11-11	X	X		
340-8515-503	Tube Assy	CFMI	72-09-03	X	X		
340-8515-503	Tube Assy	CFMI	72-09-03	X	X		
340-8515-505	Tube Assy	CFMI	72-09-03	X	X		
340-8602-503	Duct Assy	CFMI	71-00-18	X	X		
340-8612-504	Tube Assy	CFMI	72-09-03	X	X		
340-8612-505	Tube Assy	CFMI	72-09-03	X	X		
340-8612-506	Tube Assy	CFMI	72-09-03	X	X		
340-8655-505	Bracket Assy Filter	CFMI	72-09-04	X	X		
340-8657-505	Bracket Assy Filter	CFMI	72-09-04	X	X		
340-8701-507	Tube Assy	CFMI	72-09-03	X	X		
340-8701-509	Tube assy	CFMI	72-09-03	X	X		
340-8801-507	Tube Assy	CFMI	72-09-03	X	X		
340-8801-537	Tube Assy	CFMI	72-09-03	X	X		
340-8801-539	Tube Assy	CFMI	72-09-03	X	X		
340-8801-541	Tube Assy	CFMI	71-00-18	X	X		
340-8801-547	Tube Assy	CFMI	71-00-18	X	X		

4.1.4- CFM 56 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
340-8801-549	Tube Assy	CFMI	72-09-03	X	X		
340-8801-551	Tube Assy	CFMI	72-09-03	X	X		
340-8801-557	Tube Assy	CFMI	72-09-03	X	X		
340-8801-559	Tube Assy	CFMI	72-09-03	X	X		
340-8801-561	Tube Assy Drain	CFMI	72-09-03	X	X		
340-8801-563	Tube Assy	CFMI	72-09-03	X	X		
340-8801-565	Tube Assy	CFMI	72-09-03	X	X		
340-8801-567	Tube Assy	CFMI	72-09-03	X	X		
340-8801-569	Tube Assy	CFMI	72-09-03	X	X		
340-8801-571	Tube Assy	CFMI	72-09-03	X	X		
340-8801-573	Tube Assy	CFMI	72-09-03	X	X		
340-8926-501	Tube Assy	CFMI	72-09-03	X	X		
340-8926-505	Tube Assy	CFMI	72-09-03	X	X		
340-8926-507	Tube Assy	CFMI	72-09-03	X	X		
340D8659-505	Hose Assy-Tube	CFMI	72-09-03	X	X		
6237M89B	Bearing number 1 vibration sensor	CFMI	77-31-21	X	X		
642-5503-501	Tee Assy Mid Flange	CFMI	71-00-17	X	X		
642-5508-503	Duct Assy Upper HP	CFMI	71-00-17	X	X		
642-5510-501	Duct Assy Lower HP	CFMI	71-00-17	X	X		
642-5524-501	Bracket	CFMI	72-09-04	X	X	X	
642-9936-501	Bracket	CFMI	72-09-04	X	X	X	
642-9951-503	Bracket ROHR	CFMI	72-09-04	X	X	X	
649-430-000-0	Hose fuel	CFMI	72-09-03	X	X		
649-430-001-0	Hose fuel sov	CFMI	72-09-03	X	X		
649-430-004-0	Hose fuel	CFMI	72-09-03	X	X		
649-430-006-0	Hose oil	CFMI	72-09-03	X	X		
649-430-007-0	Hose PCR fuel	CFMI	72-09-03	X	X		
649-430-009-0	Hose RTN fuel oil ht exch	CFMI	72-09-03	X	X		
649-430-030-0	Hose fuel	CFMI	72-09-03	X	X		
649-430-031-0	Hose fuel sov	CFMI	72-09-03	X	X		
649-430-034-0	Hose fuel	CFMI	72-09-03	X	X		
649-430-036-0	Hose oil	CFMI	72-09-03	X	X		
649-430-037-0	Hose PCR fuel	CFMI	72-09-03	X	X		
649-430-039-0	Hose RTN fuel oil ht exch	CFMI	72-09-03	X	X		
649-430-071-0	Hose RTN fuel oil ht exch	CFMI	72-09-03	X	X		
649-430-100-0	Hose RTN heater	CFMI	72-09-03	X	X		
649-430-101-0	Hose oil (vent tank)	CFMI	72-09-03	X	X		

4.1.4- CFM 56 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
649-430-114-0	Hose- fuel inlet exchanger IDG	CFMI	72-09-03	X	X		
649-430-130-0	Hose RTN heater	CFMI	72-09-03	X	X		
649-430-200-0	Hose stage fuel	CFMI	72-09-03	X	X		
649-430-201-0	Hose LPT fuel	CFMI	72-09-03	X	X		
649-430-202-0	Hose-VSV Head	CFMI	72-09-03	X	X		
649-430-203-0	Hose fuel	CFMI	72-09-03	X	X		
649-430-212-0	Hose fuel	CFMI	72-09-03	X	X		
649-430-230-0	Hose stage fuel	CFMI	72-09-03	X	X		
649-430-231-0	Hose LPT fuel	CFMI	72-09-03	X	X		
649-430-232-0	Hose-VSV Head	CFMI	72-09-03	X	X		
649-430-233-0	Hose fuel	CFMI	72-09-03	X	X		
649-430-242-0	Hose fuel	CFMI	72-09-03	X	X		
649-430-300-0	Hose Oil FWD Sump Scavenge	CFMI	72-09-03	X	X		
649-430-330-0	Hose Oil FWD Sump Scavenge	CFMI	72-09-03	X	X		
649-432-100-0	Hose RTN heater	CFMI	72-09-03	X	X		
649-432-330-0	Hose Oil FWD Sump Scavenge	CFMI	72-09-03	X	X		
649-433-034-0	Hose RACC (fuel)	CFMI	72-09-03	X	X		
649-433-144-0	Hose Fuel Inlet Exchanger Idg	CFMI	72-09-03	X	X		
649-433-146-0	Hose oil heater	CFMI	72-09-03	X	X		
649-433-147-0	Hose RTN heater	CFMI	72-09-03	X	X		
649-434-030-0	Hose fuel	CFMI	72-09-03	X	X		
649-434-034-0	Hose RACC	CFMI	72-09-03	X	X		
649-434-144-0	Hose Fuel Inlet Exchanger Idg	CFMI	72-09-03	X	X		
649-434-147-0	Hose RTN heater	CFMI	72-09-03	X	X		
649-435-144-0	Hose Fuel Inlet Exchanger Idg	CFMI	72-09-03	X	X		
87028-2	Duct Assy	CFMI	72-09-03	X	X		
87029-2	Duct Assy Starter	CFMI	72-09-03	X	X		
87030-2	Duct Assy	CFMI	72-09-03	X	X		
9335M34G05	Manifold Air HPT Clearance Control	CFMI	72-09-03	X	X		
9375M16G01	Manifold main fuel supply	CFMI	72-09-03	X	X		
9375M16G02	Manifold main fuel supply	CFMI	72-09-03	X	X		
9375M16G03	Manifold main fuel supply	CFMI	72-09-03	X	X		
9375M24G01	Tube cit sensor regulated	CFMI	72-09-03	X	X		
9375M24G02	Tube cit sensor regulated	CFMI	72-09-03	X	X		
9375M24G03	Tube cit sensor regulated	CFMI	72-09-03	X	X		
9375M24G04	Tube cit sensor regulated	CFMI	72-09-03	X	X		
9375M26G01	Tube cit sensor regulated	CFMI	72-09-03	X	X		

4.1.4- CFM 56 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
9375M26G02	Tube cit sensor regulated	CFMI	72-09-03	X	X		
9375M26G03	Tube cit sensor regulated	CFMI	72-09-03	X	X		
9375M26G04	Tube cit sensor regulated	CFMI	72-09-03	X	X		
9375M90G03	Manifold fuel LH	CFMI	72-09-03	X	X		
9375M90G04	Manifold fuel RH	CFMI	72-09-03	X	X		
9375M90G05	Manifold fuel LH	CFMI	72-09-03	X	X		
9375M90G06	Manifold fuel RH	CFMI	72-09-03	X	X		
9375M90G09	Manifold fuel LH	CFMI	72-09-03	X	X		
9375M90G10	Manifold fuel RH	CFMI	72-09-03	X	X		
9375M90G11	Manifold fuel LH	CFMI	72-09-03	X	X		
9375M90G12	Manifold fuel RH	CFMI	72-09-03	X	X		
9375M90G14	Manifold fuel RH	CFMI	72-09-03	X	X		
9386M13G07	Manifold drain RH	CFMI	72-41-04	X	X		
9386M13G08	Manifold drain RH	CFMI	72-41-04	X	X		
9386M15G07	Manifold drain LH	CFMI	72-09-03	X	X		
9393M12G01	Tube Air Cooling	CFMI	72-09-03	X	X		
9393M42G01	Tube fuel	CFMI	72-09-03	X	X		
9393M42G03	Tube fuel	CFMI	72-09-03	X	X		
9393M46G05	Manifold drain VSV	CFMI	72-09-03	X	X		
9393M46G06	Manifold drain VSV	CFMI	72-09-03	X	X		
9393M46G07	Tube fuel drain	CFMI	72-09-03	X	X		
9393M46G08	Manifold drain VSV	CFMI	72-09-03	X	X		
9393M59G05	Manifold fuel drain RH	CFMI	72-09-03	X	X		
9393M60G07	Manifold fuel drain LH	CFMI	72-09-03	X	X		
9393M80G01	Tube fuel	CFMI	72-09-03	X	X		
9393M80G03	Tube fuel	CFMI	72-09-03	X	X		
9394M20G03	Bracket - VSV manifold	CFMI	72-09-04	X	X	X	
9394M20G03	BRACKET-VSV MANIFOLD	CFMI	72-09-04	X	X	X	
9394M21G01	Bracket - VSV manifold	CFMI	72-09-04	X	X	X	
9394M21G01	BRACKET-VSV MANIFOLD	CFMI	72-09-04	X	X	X	
9394M22G01	Bracket - VSV manifold	CFMI	72-09-04	X	X	X	
9394M22G01	BRACKET-VSV MANIFOLD	CFMI	72-09-04	X	X	X	
9394M34G01	Fuel Drain Tube	CFMI	72-09-03	X	X	X	
9909873-101	Duct assy	CFMI	72-09-03	X	X		
9909873-103	Duct Assy	ROHR	71-00-17	X	X		
9909874-103	Duct assy	CFMI	72-09-03	X	X		
S700H0389-43	Hose assy	CFMI	72-09-03	X	X		

4.1.4- CFM 56 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
S700H0391-167	Hose assy (Anti-ice)	CFMI	72-09-03	X	X		

4.1.5- G.E. 90 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection / Test	Repair	Overhaul	Modification
1680M93P03	Tube Hose Fuel Flowmeter	G.E.	72-09-03	X	X		
1683M76G01	Tube Air Cooling HPT	G.E.	72-09-03	X	X	X	
1694M52G01	Tube Oil Supply TRF	G.E.	72-09-03	X	X	X	
1694M52G02	Tube Oil Supply TRF	G.E.	72-09-03	X	X	X	
1828M17G02	Manifold Air HPT CLG	G.E.	72-09-03	X	X		
1842M11G01	Tube Oil Supply TRF	G.E.	72-09-03	X	X	X	
1842M11G02	Tube Oil Supply TRF	G.E.	72-09-03	X	X	X	
1859M29G01	Tube Oil No.5 Bearing Scavenge	G.E.	72-09-03	X	X	X	
1860M12P01	Hose Oil IDG	G.E.	72-09-03	X	X		
1860M12P02	Hose Oil IDG	G.E.	72-09-03	X	X		
1860M14P01	Tube and Hose-IDG IN	G.E.	72-09-03	X	X		
1860M14P03	Tube and Hose-IDG IN	G.E.	72-09-03	X	X		
1876M90P01	Tube Hose Oil	G.E.	72-09-03	X	X		
1899M26P01	Tube and Hose-IDG IN	G.E.	72-09-03	X	X		
1899M34P01	Tube Hose-Oil IDG OUT	G.E.	72-09-03	X	X		
1899M57G01	Manifold Air	G.E.	72-09-03	X	X		
1899M59G01	Manifold Air	G.E.	72-09-03	X	X		
1899M62G01	Manifold Air HPT ACC	G.E.	72-09-03	X	X	X	
1899M90G01	Tube Oil No.5 Bearing Scavenge	G.E.	72-09-03	X	X		
1966M10G02	Core assy Air Tube	G.E.	72-09-03	X	X	X	
2018M75G01	Manifold Drain	G.E.	72-09-03	X	X	X	
2061M83G01	Tube Drain Main	G.E.	72-09-03	X	X	X	
2062M13G01	Tube Drain Aux	G.E.	72-09-03	X	X	X	
2082M46G01	Tube Scavenge Right	G.E.	72-09-03	X	X	X	
2082M47G01	Tube Vent Turbine Center Frame	G.E.	72-09-03	X	X	X	
2082M51G01	Tube Scavenge Left	G.E.	72-09-03	X	X	X	
2150M32G01	Tube Air Start Bleed	G.E.	72-09-03	X	X		
2151M82P01	Tube and Hose-IDG IN oil	G.E.	72-09-03	X	X		
2151M83P01	Hose Oil IDG	G.E.	72-09-03	X	X		
2151M85P01	Tube Hose Oil	G.E.	72-09-03	X	X		
2151M92G01	Tube and Hose-IDG IN	G.E.	72-09-03	X	X		
2151M93G01	Tube Hose Oil	G.E.	72-09-03	X	X		
2151M94P01	Hose Oil IDG	G.E.	72-09-03	X	X		
2153M54P01	Tube Hose Oil	G.E.	72-09-03	X	X		
2165M59G01	Tube Oil No.5 Bearing Scavenge	G.E.	72-09-03	X	X	X	
350-001-353-0	HPCR Damper	G.E.	72-31-11		X		
350-038-902-0	Tube-Oil return	G.E.	72-09-03	X	X		

4.1.5- G.E. 90 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection / Test	Repair	Overhaul	Modification
350-041-101-0	Tube Oil Supply	G.E.	72-09-03	X	X		
350-118-503-0	Tube Hose Oil	G.E.	72-09-03	X	X		
350-118-504-0	Tube Hose Oil	G.E.	72-09-03	X	X		
350-118-505-0	Tube Hose Oil	G.E.	72-09-03	X	X		
A5208-2	Hose Oil IDG	G.E.	72-09-03	X	X		
A5209-3	Tube and Hose-IDG IN	G.E.	72-09-03	X	X		
A5239-1	Tube Hose Oil	G.E.	72-09-03	X	X		
A5266-1	Hose Oil IDG	G.E.	72-09-03	X	X		
A5267-1	Tube Hose Oil	G.E.	72-09-03	X	X		
A5270-1	Tube and Hose-IDG IN	G.E.	72-09-03	X	X		
A5318-1	Tube and Hose-IDG IN	G.E.	72-09-03	X	X		
A5319-1	Hose Oil IDG	G.E.	72-09-03	X	X		
A5321-1	Tube Hose Oil	G.E.	72-09-03	X	X		
A5344-1	Tube Hose Oil	G.E.	72-09-03	X	X		

4.1.6- PW2037 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection / Test	Repair	Overhaul	Modification
314N3200-1,-7,-9	Primary Exhaust Plug Assy	BOEING	78-11-11		X		
314N3310-1,-23,-24,..	Primary Exhaust Plug Assy	BOEING	78-11-01		X		
..,-31,-34,-35					X		
314N3320-1,-7	Primary Exhaust Plug Assy	BOEING	78-11-11		X		

4.1.7- PW4000 Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection / Test	Repair	Overhaul	Modification
221-0051-511	Nozzle AY-Power Plant	Pratt & Whitney	78-10-04	X	X		
221-0051-513	Nozzle AY-Power Plant	Pratt & Whitney	78-10-04	X	X		
221-0051-515	Nozzle AY-Power Plant	Pratt & Whitney	78-10-04	X	X		
221-0051-517	Nozzle AY-Power Plant	Pratt & Whitney	78-10-04	X	X	X	X
221-0051-519	Nozzle AY-Power Plant	Pratt & Whitney	78-10-04	X	X		
221-0051-521	Nozzle AY-Power Plant	Pratt & Whitney	78-10-04	X	X		
221-0051-523	Nozzle AY-Power Plant	Pratt & Whitney	78-10-04	X	X		X
221-0051-525	Nozzle AY-Power Plant	Pratt & Whitney	78-10-04	X	X		
221-0051-529	Nozzle AY-Power Plant	Pratt & Whitney	78-10-04	X	X		
221-0051-531	Nozzle AY-Power Plant	Pratt & Whitney	78-10-04	X	X		
221-0051-533	Nozzle AY-Power Plant	Pratt & Whitney	78-10-04	X	X		
221-0051-535	Nozzle AY-Power Plant	Pratt & Whitney	78-10-04	X	X		
221-0051-537	Nozzle AY-Power Plant	Pratt & Whitney	78-10-04	X	X		
221-0055-505	Exhaust Nozzle Bulkhead Ring Short	Pratt & Whitney	78-10-04	X	X		
221-0055-507	Exhaust Nozzle Bulkhead Ring Short	Pratt & Whitney	78-10-04	X	X		
221-0055-509	Exhaust Nozzle Bulkhead Ring Short	Pratt & Whitney	78-10-04	X	X		
221-0055-511	Exhaust Nozzle Bulkhead Ring Short	Pratt & Whitney	78-10-04	X	X		
221-0055-513	Exhaust Nozzle Bulkhead Ring Short	Pratt & Whitney	78-10-04	X	X		
221-0057-517	Nozzle AY-Engine Exhaust	Pratt & Whitney	78-10-04	X	X		
221-0057-521	Nozzle AY-Engine Exhaust	Pratt & Whitney	78-10-04	X	X		
221-0057-523	Nozzle AY-Engine Exhaust	Pratt & Whitney	78-10-04	X	X		
221-0057-525	Nozzle AY-Engine Exhaust	Pratt & Whitney	78-10-04	X	X		
221-0057-529	Nozzle AY-Engine Exhaust	Pratt & Whitney	78-10-04	X	X		
221-0057-531	Nozzle AY-Engine Exhaust	Pratt & Whitney	78-10-04	X	X		
221-0057-533	Nozzle AY-Engine Exhaust	Pratt & Whitney	78-10-04	X	X		
221-0057-535	Nozzle AY-Engine Exhaust	Pratt & Whitney	78-10-04	X	X		
221-0057-537	Nozzle AY-Engine Exhaust	Pratt & Whitney	78-10-04	X	X		
221-0057-539	Nozzle AY-Engine Exhaust	Pratt & Whitney	78-10-04	X	X		
221-0057-541	Nozzle AY-Engine Exhaust	Pratt & Whitney	78-10-04	X	X		

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection / Test	Repair	Overhaul	Modification
221-0057-543	Nozzle AY-Engine Exhaust	Pratt & Whitney	78-10-04	X	X		
221-0062-15	Exhaust engine attaching Ring Short	Pratt & Whitney	78-10-04	X	X		
221-0062-17	Exhaust engine attaching Ring Short	Pratt & Whitney	78-10-04	X	X		
221-0063-507	Duct AY Nozzle	Pratt & Whitney	78-10-04	X	X		
221-6615-501	Duct AY Nozzle	Pratt & Whitney	78-10-04	X	X		
221-0066-507	Barrel AY Nozzle	Pratt & Whitney	78-10-04	X	X		
221-0066-509	Barrel AY Nozzle	Pratt & Whitney	78-10-04	X	X		
221-0072-39	Seal AY Strut	Pratt & Whitney	78-10-04	X	X		
221-0072-69	Seal AY Strut	Pratt & Whitney	78-10-04	X	X		
221-4027-505	Plug AY	Pratt & Whitney	78-10-03	X	X		
221-4027-511	Plug AY	Pratt & Whitney	78-10-03	X	X		
221-4027-513	Plug AY	Pratt & Whitney	78-10-03	X	X		
221-4037-501	Plug AY	Pratt & Whitney	78-10-03	X	X		
221-4036-501	Adapter AY Plug	Pratt & Whitney	78-10-03	X	X		

4.1.8 - ATR 42/72

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection / Test	Repair	Overhaul	Modification
M10DE0103	Ejection Duct ATR 42/72	Bronzavia	78-11-61	X	X		
M10DE0104	Ejection Duct ATR 42/72	Bronzavia	78-11-61	X	X		

4.1.9 - Thrust Reverser Trent 700

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection / Test	Repair	Overhaul	Modification
91B782-00	Turbine Case Cooling (TCC) Duct	SAFRAN	78-30-20	X	X		
91B782-01	Turbine Case Cooling (TCC) Duct	SAFRAN	78-30-21	X	X		

4.2.1- Boeing Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
015T1422-5	Manifold assy	BOEING	36-10-04	X	X		
312U2371-20	Duct assy	BOEING	36-10-04	X	X		
332A2310-1	Engine Start System Upper Duct Assy	BOEING	36-10-03	X	X		
332U2312-9	Duct assy - Low start	BOEING	36-10-04	X	X		
332U2321-1	Duct	BOEING	36-10-04	X	X		
332U2322-13	Manifold assy	BOEING	36-10-04	X	X		
332U2322-26	Manifold assy	BOEING	36-10-04	X	X		
332U2322-35	Manifold assy	BOEING	36-10-04	X	X		
332W1322-19	Duct Assy	BOEING	36-10-07	X	X		
332W1391-9	Duct assy	BOEING	36-10-07	X	X		
65-66201-9	Duct assy	BOEING	36-10-03	X	X		
65B90124-31	Precooler inlet diffuser assy	BOEING	36-10-04	X	X		
65B90124-35	Precooler inlet diffuser assy	BOEING	36-10-04	X	X		
65B90124-36	Precooler inlet diffuser assy	BOEING	36-10-04	X	X		
65B90193-22	Precooler engine 8 th stage bleed duct assy	BOEING	36-10-04	X	X		
65B90193-28	Precooler engine 8 th stage bleed duct assy	BOEING	36-10-04	X	X		
65B90193-32	Precooler engine 8 th stage bleed duct assy	BOEING	36-10-04	X	X		
65B90193-36	Precooler engine 8 th stage bleed duct assy	BOEING	36-10-04	X	X		
65B90196-10	Engine 8 th stage bleed lower elbow duct assy	BOEING	36-10-04	X	X		
65B90196-5	Engine 8 th stage bleed lower elbow duct assy	BOEING	36-10-04	X	X		
65B90196-9	Engine 8 th stage bleed lower elbow duct assy	BOEING	36-10-04	X	X		
65B90199-3	Engine 15 th stage bleed port 2 duct assy	BOEING	36-10-04	X	X		
65B90199-5	Engine 15 th stage bleed port 2 duct assy	BOEING	36-10-04	X	X		
65B90200-2	Engine 15 th stage bleed port 3 duct assy	BOEING	36-10-04	X	X		
65B90200-3	Engine 15 th stage bleed port 3 duct assy	BOEING	36-10-04	X	X		
65B91149-1	Engine 15 th stage pneu. bleed port 4 duct assy	BOEING	36-10-04	X	X		
65B91149-17	Engine 15 th stage pneu. bleed port 4 duct assy	BOEING	36-10-04	X	X		
65B91149-19	Engine 15 th stage pneu. bleed port 4 duct assy	BOEING	36-10-04	X	X		
65B91200-1	Gnr power thrust reverser duct assy	BOEING	36-10-04	X	X		
65B91200-16	Gnr power thrust reverser duct assy	BOEING	36-10-04	X	X		
65B91200-22	Gnr power thrust reverser duct assy	BOEING	36-10-04	X	X		
65B91200-8	Gnr power thrust reverser duct assy	BOEING	36-10-04	X	X		
65B91246-1	Fan thrust reverser air supply duct assy	BOEING	36-10-04	X	X		
65B91263-15	Engine 8 th stage bleed duct assy	BOEING	36-10-04	X	X		
65B91263-18	Engine 8 th stage bleed duct assy	BOEING	36-10-04	X	X		
65B91265-1	Elbow duct assy	BOEING	36-10-04	X	X		
65B91265-10	Elbow duct assy	BOEING	36-10-04	X	X		

4.2.1- Boeing Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
65B91265-12	Elbow duct assy	BOEING	36-10-04	X	X		
65B91265-19	Elbow duct assy	BOEING	36-10-04	X	X		
65B91272-1	Precooler engine 8 th stage bleed duct assy	BOEING	36-10-04	X	X		
65B93020-1	Lower inlet duct assy	BOEING	36-10-04	X	X		
65B93020-13	Lower inlet duct assy	BOEING	36-10-04	X	X		
65B93020-16	Lower inlet duct assy	BOEING	36-10-04	X	X		
65B93020-17	Lower inlet duct assy	BOEING	36-10-04	X	X		
65B93020-23	Lower inlet duct assy	BOEING	36-10-04	X	X		
65B93020-24	Lower inlet duct assy	BOEING	36-10-04	X	X		
65B93020-25	Lower inlet duct assy	BOEING	36-10-04	X	X		
65B93020-33	Lower inlet duct assy	BOEING	36-10-04	X	X		
65B93020-9	Lower inlet duct assy	BOEING	36-10-04	X	X		
65B93070-1	Engine 8 th stage bleed lower elbow duct assy	BOEING	36-10-04	X	X		
65B94189-1	Engine starter flexible duct assy	BOEING	36-10-04	X	X		
65B94541-1	EBU pneum. syst. transition duct assy	BOEING	36-10-04	X	X		
65B94541-4	EBU pneum. syst. transition duct assy	BOEING	36-10-04	X	X		
65B94544-1	EBU pneum. syst. transition duct assy	BOEING	36-10-04	X	X		
65B94544-13	EBU pneum. syst. transition duct assy	BOEING	36-10-04	X	X		
65B94544-14	EBU pneum. syst. transition duct assy	BOEING	36-10-04	X	X		
65B94544-15	EBU pneum. syst. transition duct assy	BOEING	36-10-04	X	X		
65B94813-1	EBU pneum. syst. tee bleed duct assy	BOEING	36-10-04	X	X		
65B94814-1	Hose fuel	BOEING	36-10-04	X	X		
65B94819-1	EBU pneu. syst. 8 th stage poppet valve duct assy	BOEING	36-10-04	X	X		
65B94819-11	EBU pneu. syst. 8 th stage poppet valve duct assy	BOEING	36-10-04	X	X		
65B94819-12	EBU pneu. syst. 8 th stage poppet valve duct assy	BOEING	36-10-04	X	X		
65B94819-2	EBU pneu. syst. 8 th stage poppet valve duct assy	BOEING	36-10-04	X	X		

4.3.1- Airbus Series

Part Number	Description	Manufacturer	Component manufacturer manual	Inspection /	Repair	Overhaul	Modification
9333M29G07	Main Fairing assy	AIRBUS	54-55-51	X	X		
9333M29G07	Trailing Edge Fairing Assy	AIRBUS	54-55-51	X	X		
1986M98P01 / P02	Skin	AIRBUS	54-55-51	X	X		
1987M16P01 / P02	Shear Clip	AIRBUS	54-55-51	X	X		
1987M21P01 / P02	Shear Clip	AIRBUS	54-55-51	X	X		
1987M20P01	Doubler Lower	AIRBUS	54-55-51	X	X		